

Component Procedures: Alarm Module

Table of Contents

1. Parts and Labor (itype_189)
2. Immobilizer (Article 13207)
3. Theft Deterrent Module Programming and Setup (Article 10758)

Component Procedures: Alarm Module

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Ignition Immobilizer Module	13504286	Control Module	49.61	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Anti-Theft Components > Module, R&R	B	1.1	0.0

Immobilizer (Article 13207)

Non Standards

- Theft Deterrent Module Replacement (13208)

Theft Deterrent Module Programming and Setup (Article 10758)

Replace and Program ECU or Reprogram ECU

This ECU does not require SPS programming or any setup procedures.