

Component Procedures: Cruise Control Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Cruise Control Switch Replacement (Article 11082)

Component Procedures: Cruise Control Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Switch	92219335	Switch	0.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Cruise Control > Engagement Switch, R&R	B	0.5	0.0

Cruise Control Switch Replacement (Article 11082)

Callout Component Name

Preliminary Procedure Remove the steering wheel spoke cover. Refer to Steering Wheel Spoke Cover Replacement .

Preliminary Procedure

Remove the steering wheel spoke cover. Refer to Steering Wheel Spoke Cover Replacement .

1 Cruise Control Switch Fastener (Qty: 2) Caution: Refer to Fastener Caution .

2 Cruise Control Switch