

Component Procedures: Turn Signal Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Turn Signal Switch Bracket Replacement (Article 13502)

Component Procedures: Turn Signal Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Turn Signal Switch	20962250	Turn Signal Switch	67.52	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Turn Signal Switch, R&R	B	0.5	0.3

Turn Signal Switch Bracket Replacement (Article 13502)

Callout Component Name

Preliminary Procedure Remove the steering wheel airbag coil. Refer to Steering Wheel Airbag Coil Replacement .

Preliminary Procedure

Remove the steering wheel airbag coil. Refer to Steering Wheel Airbag Coil Replacement .

1 Turn Signal Switch Bracket Fastener (Qty: 2)

2 Turn Signal Switch Bracket Procedure Disconnect any electrical connectors as necessary. Transfer any parts as necessary. Refer to Turn Signal Multifunction Switch Replacement and to Windshield Wiper and Windshield Washer Switch Replacement .

Procedure

- Disconnect any electrical connectors as necessary.

- Transfer any parts as necessary. Refer to Turn Signal Multifunction Switch Replacement and to Windshield Wiper and Windshield Washer Switch Replacement .