

Component Procedures: Engine Oil Dip Stick - Dip Stick Tube

Table of Contents

1. Oil Level Indicator Tube Replacement (Article 12189)

Component Procedures: Engine Oil Dip Stick - Dip Stick Tube

Oil Level Indicator Tube Replacement (Article 12189)

Removal Procedure

- Remove the intake manifold cover (2). Refer to Intake Manifold Cover Replacement - Front . Click for full-size image
- Remove the oil level indicator (1) from the oil level indicator tube (3). Click for full-size image
- Remove the oil level indicator tube to cylinder head retaining bolt (3).
- Remove the oil level indicator tube (2) from the engine.
- Remove the O-ring (1) from the oil level indicator tube (2) and discard. Click for full-size image

Installation Procedure

- Install the O-ring (1) on the oil level indicator tube (2). Click for full-size image
- Install the oil level indicator tube (2) to the engine. Click for full-size image
- Install the oil level indicator tube to cylinder head retaining bolt (3) and tighten to 9 Nm (80 lb in).
- Install the oil level indicator (1) to the oil level indicator tube (2).
- Install the intake manifold cover (2). Refer to Intake Manifold Cover Replacement - Front . Click for full-size image