

Component Procedures: Engine Block Heater

Table of Contents

1. Parts and Labor (itype_189)
2. Engine Coolant Heater Replacement (LFX) (Article 11871)
3. Engine Coolant Heater Cord Replacement (LFX) (Article 11870)

Component Procedures: Engine Block Heater

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Cooling System > Block Heater, R&R	B	0.5	0.0

Engine Coolant Heater Replacement (LFX) (Article 11871)

Callout Component Name

1 Engine Coolant Heater Procedure Disconnect the coolant heater cord connector at the engine block .

Procedure

Disconnect the coolant heater cord connector at the engine block .

Engine Coolant Heater Cord Replacement (LFX) (Article 11870)

Callout Component Name

1 Coolant Heater Cord Retainers. Procedure Disconnect the coolant heater connector at the engine block and the retainers on the engine coolant heater cord harness.

Procedure

Disconnect the coolant heater connector at the engine block and the retainers on the engine coolant heater cord harness.

2 Engine Coolant Heater Cord.