

Component Procedures: Power Steering Fluid Reservoir

Table of Contents

1. Parts and Labor (itype_189)
2. Power Steering Fluid Reservoir Replacement (Article 13455)
3. Power Steering Fluid Reservoir Bracket Replacement (Article 13453)
4. All Technical Service Bulletins (itype_100)
5. Leaks (itype_149)

Component Procedures: Power Steering Fluid Reservoir

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Hydraulic > Reservoir	92233427	Power Steering Reservo?	93.34	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Power Hydraulic > P/S Pump & Hoses > Reservoir?	B	0.4	0.3
Remove & Replace	Power Hydraulic > P/S Pump & Hoses > Reservoir?	B	0.8	0.0

Power Steering Fluid Reservoir Replacement (Article 13455)

Callout Component Name

Caution: Do not start the vehicle with any power steering gear inlet or outlet hoses disconnected. When disconnected, plug or cap all openings of components. Failure to do so could result in contamination or loss of power steering fluid and damage to the system. Preliminary Procedures Remove the front intake manifold cover. Refer to Intake Manifold Cover Replacement - Front . Place drain pans under the vehicle. Remove as much power steering fluid from the reservoir as possible. Disconnect the power steering fluid reservoir outlet hose from the power steering fluid reservoir . Cap the power steering fluid reservoir outlet hose. Disconnect the power steering fluid cooler outlet hose from the power steering fluid reservoir. Cap the power steering fluid cooler outlet hose.

Preliminary Procedures

- Remove the front intake manifold cover. Refer to Intake Manifold Cover Replacement - Front .
- Place drain pans under the vehicle.
- Remove as much power steering fluid from the reservoir as possible.
- Disconnect the power steering fluid reservoir outlet hose from the power steering fluid reservoir . Cap the power steering fluid reservoir outlet hose.
- Disconnect the power steering fluid cooler outlet hose from the power steering fluid reservoir. Cap the power steering fluid cooler outlet hose.

1 Power Steering Fluid Reservoir Procedure Release the clip and slide the power steering fluid reservoir off of the power steering fluid reservoir bracket. Fill the power steering fluid reservoir. Refer to Checking and Adding Power Steering Fluid . Clean any excess power steering fluid from the vehicle.

Procedure

- Release the clip and slide the power steering fluid reservoir off of the power steering fluid reservoir bracket.
- Fill the power steering fluid reservoir. Refer to Checking and Adding Power Steering Fluid .
- Clean any excess power steering fluid from the vehicle.

Power Steering Fluid Reservoir Bracket Replacement (Article 13453)

Callout Component Name

Preliminary Procedure Remove the power steering fluid reservoir . Refer to Power Steering Fluid Reservoir Replacement .

Preliminary Procedure

Remove the power steering fluid reservoir . Refer to Power Steering Fluid Reservoir Replacement .

1 Power Steering Fluid Reservoir Bracket Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 9 Nm (80 lb in)

9 Nm (80 lb in)

2 Power Steering Fluid Reservoir Bracket

All Technical Service Bulletins (itype_100)

Tsbs

- Power Steering Fluid Leak at Fluid Reservoir or Reservoir Connection (PI0671A, 2017/03/17)

Leaks (itype_149)

Tsbs

- Power Steering Fluid Leak at Fluid Reservoir or Reservoir Connection (PI0671A, 2017/03/17)