

Component Procedures: Starter Motor

Table of Contents

1. Parts and Labor (itype_189)
2. Starter Replacement (LFX) (Article 11961)

Component Procedures: Starter Motor

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Starter	12644788	Starter	319.94	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Starter > Starter, R&R > With 3.6l	B	1.3	0.0
Remove & Replace	Starter > Starter, R&R > Without 3.6l	B	0.9	0.0

Starter Replacement (LFX) (Article 11961)

Callout Component Name

Preliminary Procedure Disconnect the negative battery cable . Refer to Battery Negative Cable Disconnection and Connection . Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle . Remove the left engine mount. Refer to Engine Mount Replacement - Left Side .

Preliminary Procedure

- Disconnect the negative battery cable . Refer to Battery Negative Cable Disconnection and Connection .
- Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .
- Remove the left engine mount. Refer to Engine Mount Replacement - Left Side .

1 Engine Harness Connector

2 Battery Positive Fastener Caution: Refer to Fastener Caution . Tighten 13 Nm (115 lb in)

13 Nm (115 lb in)

3 Battery Positive Cable

4 Starter Mounting Fasteners (Qty: 2) Tighten 58 Nm (43 lb ft)

58 Nm (43 lb ft)

5 Starter