

# **Component Procedures: Parking Light Bulb**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Parking and Turn Signal Lamp Bulb Replacement (Article 10409)

# Component Procedures: Parking Light Bulb

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Parking/Turn > ?	C	0.5	0.0
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Parking/Turn > ?	C	0.3	0.3

### Parking and Turn Signal Lamp Bulb Replacement (Article 10409)

Callout Component Name

Preliminary Procedure Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement .

Preliminary Procedure

Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement .

1 Park and Turn Signal Lamp Bulb Procedure Rotate the bulb socket counter-clockwise and remove from the headlamp assembly . Pull the bulb straight from the bulb socket.

Procedure

- Rotate the bulb socket counter-clockwise and remove from the headlamp assembly .
- Pull the bulb straight from the bulb socket.