

# **Component Procedures: Turn Signal Bulb**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Outside Rearview Mirror Turn Signal Lamp Replacement (Export) (Article 10408)
3. Parking and Turn Signal Lamp Bulb Replacement (Article 10410)

# Component Procedures: Turn Signal Bulb

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Turn Signal Bulb > Front	15855631	Turn Signal Bulb	18.66	
Turn Signal Bulb > Sidemarker	13503401	Side Marker Bulb	4.35	
Turn Signal Bulb > Rear	20998089	Stoplamp Bulb	8.34	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Parking/Turn > ?	C	0.5	0.0
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Parking/Turn > ?	C	0.3	0.3
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Rear Stop/Turn	C	0.4	0.0

## Outside Rearview Mirror Turn Signal Lamp Replacement (Export) (Article 10408)

Callout Component Name

Preliminary Procedure Remove the outside rearview mirror glass. Refer to Outside Rearview Mirror Glass Replacement . Disconnect the turn signal electrical connector from the main mirror harness.

Preliminary Procedure

- Remove the outside rearview mirror glass. Refer to Outside Rearview Mirror Glass Replacement .
- Disconnect the turn signal electrical connector from the main mirror harness.

1 Outside Rearview Mirror Turn Signal Lamp Procedure Compress the four tabs on the turn signal and push outward from the mirror housing in order to remove the turn signal.

Procedure

Compress the four tabs on the turn signal and push outward from the mirror housing in order to remove the turn signal.

## Parking and Turn Signal Lamp Bulb Replacement (Article 10410)

Callout Component Name

Preliminary Procedure Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement .

Preliminary Procedure

Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement .

1 Park and Turn Signal Lamp Bulb Procedure Rotate the bulb socket counter-clockwise and remove from the headlamp assembly . Pull the bulb straight from the bulb socket.

Procedure

- Rotate the bulb socket counter-clockwise and remove from the headlamp assembly .
- Pull the bulb straight from the bulb socket.