

Component Procedures: Brake Light Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Tail Lamp Bulb Replacement (Article 10416)

Component Procedures: Brake Light Bulb

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Rear Stop/Turn	C	0.4	0.0

Tail Lamp Bulb Replacement (Article 10416)

Callout Component Name

Preliminary Procedure Remove the tail lamp closeout filler panel. Refer to Tail Lamp Closeout Filler Replacement .

Preliminary Procedure

Remove the tail lamp closeout filler panel. Refer to Tail Lamp Closeout Filler Replacement .

1 Tail Lamp Bulb Socket Warning: Refer to Halogen Bulb Warning . Procedure Disconnect the electrical connector from the bulb socket prior to removing the socket. Rotate the bulb socket counter-clockwise and remove from the tail lamp assembly.

Procedure

- Disconnect the electrical connector from the bulb socket prior to removing the socket.
- Rotate the bulb socket counter-clockwise and remove from the tail lamp assembly.

2 Tail Lamp Bulb Tip: Pull the tail lamp bulb out of the tail lamp bulb electrical socket.