

Component Procedures: Brake Light Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Brake Pedal Position Sensor Replacement (Article 10377)
3. 6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13713)
4. Brake Pedal Position Sensor Calibration (Article 10375)

Component Procedures: Brake Light Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Stoplamp Switch	13579088	Stoplamp Switch	24.08	Part Of Brake Pedal.

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Stoplamp Switch, R&R	B	0.6	0.0

Brake Pedal Position Sensor Replacement (Article 10377)

Callout Component Name

1 Brake Pedal Position Sensor Bolt Caution: Refer to Fastener Caution . Procedure Remove the sensor bolt.

Tighten 9 Nm (80 lb in)

Procedure

Remove the sensor bolt.

9 Nm (80 lb in)

2 Brake Pedal Position Sensor Procedure Disconnect the electrical connector. Pull the sensor away from the bracket. Recalibrate the brake pedal position sensor. Refer to Brake Pedal Position Sensor Calibration .

- Disconnect the electrical connector.
- Pull the sensor away from the bracket.
- Recalibrate the brake pedal position sensor. Refer to Brake Pedal Position Sensor Calibration .

6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13713)

Non Standards

- Brake Pedal Position Sensor Learn (13714)

Brake Pedal Position Sensor Calibration (Article 10375)

Calibration Criteria

Brake pedal position sensor calibration must be performed after the brake pedal position sensor or body control module (BCM) have been serviced. The calibration procedure will set the brake pedal position sensor home value. This value is used by the BCM to determine the action of the driver applying the brake system and to provide this information to the vehicle subsystems via serial data.

Calibration Procedure

- Apply the parking brake.
- Place the transmission in the PARK position.
- Install a scan tool.
- Clear all BCM DTCs before proceeding.
- Navigate to the Module Diagnosis menu.
- Select BCM menu item.
- Select Configuration/Reset Functions menu item.
- Select the Brake Pedal Position Sensor Learn procedure and follow the directions displayed on the screen.
- Perform the Engine Control Module (ECM) brake pedal position sensor calibration.