

Component Procedures: Backup Light Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Backup Lamp Bulb Replacement (Article 10372)
3. Tail Lamp Bulb Replacement (Article 10415)

Component Procedures: Backup Light Bulb

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Back-Up Lamp Bulb	10351677	Turn Signal Bulb	24.94	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Exterior Bulbs, R&R > Back-Up Lamp	C	0.9	0.4

Backup Lamp Bulb Replacement (Article 10372)

Callout Component Name

Preliminary Procedure Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .

Preliminary Procedure

Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .

1 Back Up Lamp Bulb Warning: Refer to Halogen Bulb Warning . Procedure Disconnect the electrical harness connector to the bulb socket. Rotate the bulb socket counter-clockwise. Remove and discard the bulb socket.

Procedure

- Disconnect the electrical harness connector to the bulb socket.
- Rotate the bulb socket counter-clockwise.
- Remove and discard the bulb socket.

Tail Lamp Bulb Replacement (Article 10415)

Callout Component Name

Preliminary Procedure Remove the tail lamp closeout filler panel. Refer to Tail Lamp Closeout Filler Replacement .

Preliminary Procedure

Remove the tail lamp closeout filler panel. Refer to Tail Lamp Closeout Filler Replacement .

1 Tail Lamp Bulb Socket Warning: Refer to Halogen Bulb Warning . Procedure Disconnect the electrical connector from the bulb socket prior to removing the socket. Rotate the bulb socket counter-clockwise and remove from the tail lamp assembly.

Procedure

- Disconnect the electrical connector from the bulb socket prior to removing the socket.
- Rotate the bulb socket counter-clockwise and remove from the tail lamp assembly.

2 Tail Lamp Bulb Tip: Pull the tail lamp bulb out of the tail lamp bulb electrical socket.