

Component Procedures: Parking Brake Warning Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Parking Brake Indicator Switch Replacement (Article 10716)

Component Procedures: Parking Brake Warning Switch

Parts and Labor (itype_189)

Parts

| Qualifier | Part # | Name | Price | Note |
|---------------------------|----------|-------------------------|-------|------|
| Park Brake Warning Switch | 92227534 | Park Brake Warning Swi? | 0.00 | |

Labor

| Operation | Qualifier Path | Skill | Std Hrs | Wty Hrs |
|------------------|---|-------|---------|---------|
| Remove & Replace | Switches > Park Brake Warning Switch, R&R | B | 1.8 | 0.0 |

Parking Brake Indicator Switch Replacement (Article 10716)

Callout Component Name

Preliminary Procedures Remove the parking brake lever assembly. Refer to Parking Brake Lever Replacement .

Preliminary Procedures

Remove the parking brake lever assembly. Refer to Parking Brake Lever Replacement .

1 Parking Brake Indicator Switch Bolt Caution: Refer to Fastener Caution . Tighten 3 Nm (27 lb in)

3 Nm (27 lb in)

2 Parking Brake Indicator Switch