

Component Procedures: Wiper Gear Box

Table of Contents

1. Parts and Labor (itype_189)
2. Windshield Wiper Transmission Replacement (Article 10522)

Component Procedures: Wiper Gear Box

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Wiper Transmission	20955390	Wiper Transmission	150.29	Includes: Wiper Motor.

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Wipers > Wiper Transmission, R&R	B	0.8	0.4

Windshield Wiper Transmission Replacement (Article 10522)

Callout Component Name

Preliminary Procedure Remove the air inlet grille panel assembly. Refer to Air Inlet Grille Panel Replacement

Preliminary Procedure

Remove the air inlet grille panel assembly. Refer to Air Inlet Grille Panel Replacement .

1 Windshield Wiper Transmission Bolt (Qty: 3) Caution: Refer to Fastener Caution . Tighten 5.5 Nm (49 lb in) 5.5 Nm (49 lb in)

2 Windshield Wiper Transmission Procedure Lift the front edge of the wiper transmission out from the plenum.

Disconnect the wiper motor electrical connector. Remove the wiper transmission assembly from the vehicle.

Remove the windshield wiper motor from the transmission. Refer to Windshield Wiper Motor Replacement .

Procedure

- Lift the front edge of the wiper transmission out from the plenum.
- Disconnect the wiper motor electrical connector.
- Remove the wiper transmission assembly from the vehicle.
- Remove the windshield wiper motor from the transmission. Refer to Windshield Wiper Motor Replacement .