

# **Component Procedures: Wiper Switch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Windshield Wiper and Windshield Washer Switch Replacement (Article 10518)

# Component Procedures: Wiper Switch

## Parts and Labor (itype\_189)

### Parts

| Qualifier    | Part #   | Name         | Price | Note |
|--------------|----------|--------------|-------|------|
| Wiper Switch | 20962249 | Wiper Switch | 51.41 |      |

### Labor

| Operation        | Qualifier Path               | Skill | Std Hrs | Wty Hrs |
|------------------|------------------------------|-------|---------|---------|
| Remove & Replace | Switches > Wiper Switch, R&R | B     | 0.5     | 0.3     |

## Windshield Wiper and Windshield Washer Switch Replacement (Article 10518)

Callout Component Name

Preliminary Procedure Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

Preliminary Procedure

Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

1 Windshield Wiper and Washer Switch Procedure Disconnect any electrical connectors as needed. Release the plastic retaining tabs and remove the windshield wiper and washer switch from the turn signal switch bracket.

Procedure

- Disconnect any electrical connectors as needed.
- Release the plastic retaining tabs and remove the windshield wiper and washer switch from the turn signal switch bracket.