

Component Procedures: Stabilizer Bar

Table of Contents

1. Parts and Labor (itype_189)
2. Front Suspension (Article 13543)
3. Rear Suspension (Article 13588)

Component Procedures: Stabilizer Bar

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Front Suspension > Stabilize?	20955481	11 - Stabilizer Bar	0.00	
Rear Suspension > Stabilizer?	22786261	18 - Stabilizer Bar	0.00	
Rear Suspension > Stabilizer?	22795025	18 - Stabilizer Bar	0.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Front Suspension > Stabilizer Bar > Bushings, ?	C	0.5	0.3
Remove & Replace	Front Suspension > Stabilizer Bar > Link, R&R?	C	0.5	0.4
Remove & Replace	Front Suspension > Stabilizer Bar > Link, R&R?	C	0.6	0.5
Remove & Replace	Front Suspension > Stabilizer Bar > Stabilize?	C	0.8	0.7
Remove & Replace	Rear Suspension > Stabilizer Bar > Bushings, ?	C	0.9	0.0
Remove & Replace	Rear Suspension > Stabilizer Bar > Bushings, ?	C	1.1	0.0
Remove & Replace	Rear Suspension > Stabilizer Bar > Link, R&R ?	C	0.5	0.0
Remove & Replace	Rear Suspension > Stabilizer Bar > Link, R&R ?	C	0.8	0.0
Remove & Replace	Rear Suspension > Stabilizer Bar > Stabilizer?	C	0.8	0.0

Front Suspension (Article 13543)

Non Standards

- Stabilizer Shaft Replacement (13544)

Rear Suspension (Article 13588)

Non Standards

- Stabilizer Shaft Replacement (W/FE4,FE5,FE6) (13589)
- Stabilizer Shaft Replacement (w/o FE4, FE5,FE6) (13590)