

# **Component Procedures: Hood Latch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Hood Primary and Secondary Latch Replacement (Article 10124)

# Component Procedures: Hood Latch

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Lock	22787038	Lock	0.00	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Hood > Lock, R&R	C	0.3	0.2

## Hood Primary and Secondary Latch Replacement (Article 10124)

Callout Component Name

Preliminary Procedure Remove the front bumper fascia upper support. Refer to Front Bumper Fascia Upper Support Replacement .

Preliminary Procedure

Remove the front bumper fascia upper support. Refer to Front Bumper Fascia Upper Support Replacement .

1 Hood Primary and Secondary Latch Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 25 Nm (18 lb ft) 25 Nm (18 lb ft)

2 Hood Primary and Secondary Latch Procedure Disconnect the hood release cable and the electrical connector. Procedure

Disconnect the hood release cable and the electrical connector.