

# **Component Procedures: Hood Latch Release Cable**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Hood Primary Latch Release Cable Replacement (Article 10126)
3. Hood Primary Latch Release Cable Handle Replacement (Article 10125)

# Component Procedures: Hood Latch Release Cable

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Release Cable	20959350	Release Cable	0.00	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Hood > Release Cable, R&R	C	0.5	0.3

## Hood Primary Latch Release Cable Replacement (Article 10126)

Callout Component Name

Preliminary Procedure Remove the front bumper fascia upper support. Refer to Front Bumper Fascia Upper Support Replacement .

Preliminary Procedure

Remove the front bumper fascia upper support. Refer to Front Bumper Fascia Upper Support Replacement .

1 Hood Primary Latch Cable Procedure Disconnect the hood primary latch release cable from the primary hood latch .

Procedure

Disconnect the hood primary latch release cable from the primary hood latch .

2 Hood Primary Latch Release Cable Retainer Procedure Disconnect the hood release cable retainers from the hood release cable.

Disconnect the hood release cable retainers from the hood release cable.

3 Hood Primary Latch Release Cable Grommet

4 Hood Primary Latch Release Cable Procedure Disconnect the hood primary latch release cable handle from the hood latch cable. Refer to Hood Primary Latch Release Cable Handle Replacement .

Disconnect the hood primary latch release cable handle from the hood latch cable. Refer to Hood Primary Latch Release Cable Handle Replacement .

## Hood Primary Latch Release Cable Handle Replacement (Article 10125)

Callout Component Name

1 Hood Primary Latch Release Cable Handle Retainer Procedure Press the release cable handle inward/downward to release the retainers from the instrument panel .

Procedure

Press the release cable handle inward/downward to release the retainers from the instrument panel .

2 Hood Primary Latch Release Cable Procedure Disconnect the hood release cable from the hood release handle.

Disconnect the hood release cable from the hood release handle.

3 Hood Primary Latch Release Cable Handle