

Component Procedures: Trunk / Liftgate Latch

Table of Contents

1. Parts and Labor (itype_189)
2. Rear Compartment Lid Latch Replacement (Article 10491)

Component Procedures: Trunk / Liftgate Latch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Lock	13501988	Lock	0.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Trunk > Lock, R&R	B	0.4	0.3

Rear Compartment Lid Latch Replacement (Article 10491)

Callout Component Name

Preliminary Procedure Disconnect the inside handle from the compartment lid . Refer to Rear Compartment Lid Inside Handle Replacement .

Preliminary Procedure

Disconnect the inside handle from the compartment lid . Refer to Rear Compartment Lid Inside Handle Replacement .

1 Rear Compartment Lid Latch Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 10 Nm (89 lb in) 10 Nm (89 lb in)

2 Rear Compartment Lid Latch Locator Tab/Retainer Procedure Slide the latch to release from the tab/retainers. Procedure

Slide the latch to release from the tab/retainers.

3 Rear Compartment Lid Latch