

Component Procedures: Rear Vision Camera

Table of Contents

1. Parts and Labor (itype_189)
2. Rearview Camera Image Display Module Replacement (Article 13229)
3. All Technical Service Bulletins (itype_100)

Component Procedures: Rear Vision Camera

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Parking Aid > Camera, R&R	B	0.5	0.0

Rearview Camera Image Display Module Replacement (Article 13229)

Callout Component Name

Preliminary Procedure Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .

Preliminary Procedure

Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .

1 Rearview Camera Fastener (Qty: 2) Caution: Refer to Fastener Caution .

2 Rearview Camera Image Display Module Bracket

3 Rearview Camera Image Display Module Procedure Disconnect electrical connector.

Procedure

Disconnect electrical connector.

All Technical Service Bulletins (itype_100)

Tsbs

- Diagnostic Tip: Rear View Camera Brightness Control Options (PIC5611H, 2023/01/04)