

Component Procedures: Differential Cover

Table of Contents

1. Parts and Labor (itype_189)
2. Rear Drive Axle (Article 10871)

Component Procedures: Differential Cover

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Rear Axle > Housing Cover, R&R	B	5.8	0.0
Remove & Replace	Rear Axle > Housing Cover, R&R > NOTE > To R&?		0.2	

Rear Drive Axle (Article 10871)

Non Standards

- Rear Axle Housing Cover and Gasket Replacement (250 MM Axle) (10874)