

Component Procedures: Slip Yoke

Table of Contents

1. Propeller Shaft Slip Yoke Boot Replacement (Article 10807)

Component Procedures: Slip Yoke

Propeller Shaft Slip Yoke Boot Replacement (Article 10807)

Removal Procedure

- Remove the propeller shaft . Two-Piece Propeller Shaft Replacement
- Mark the in the notch (1) in the front propeller shaft with the V (2) on the slip yoke. Click for full-size image
- Remove the propeller shaft boot (2) from the propeller shaft (1). Click for full-size image

Installation Procedure

- Ensure that the marks on the propeller shaft and the slip joint yoke are aligned Click for full-size image
- Install the boot (2) on the propeller shaft (1). Click for full-size image
- Install the boot (2) on the slip joint (3).
- Install the propeller shaft. Two-Piece Propeller Shaft Replacement
- Perform the Driveline System Balance Adjustment procedure. Driveline System Balance Adjustment