

# **Component Procedures: Quarter Window Motor**

## **Table of Contents**

1. Quarter Window Regulator Motor Replacement (Article 10268)

# Component Procedures: Quarter Window Motor

## Quarter Window Regulator Motor Replacement (Article 10268)

Callout Component Name

Preliminary Procedure Remove the quarter window regulator . Refer to Quarter Window Regulator Replacement .

Preliminary Procedure

Remove the quarter window regulator . Refer to Quarter Window Regulator Replacement .

1 Quarter Window Regulator Motor Screw (Qty: 3) Caution: Refer to Fastener Caution . Tighten 8 Nm (71 lb in) 8 Nm (71 lb in)

2 Quarter Window Regulator Motor Procedure When installing the regulator motor ensure that the gear washer is in place. After replacing the quarter window regulator motor, it is necessary to reprogram. Refer to Window Motor Programming - Express Function . Inspect the quarter window for proper operation before securing the quarter trim.

Procedure

- When installing the regulator motor ensure that the gear washer is in place.
- After replacing the quarter window regulator motor, it is necessary to reprogram. Refer to Window Motor Programming - Express Function .
- Inspect the quarter window for proper operation before securing the quarter trim.