

# **Component Procedures: Quarter Window Regulator**

## **Table of Contents**

1. Quarter Window Regulator Replacement (Article 10269)

# Component Procedures: Quarter Window Regulator

## Quarter Window Regulator Replacement (Article 10269)

Callout Component Name

Preliminary Procedures Remove the quarter window reveal molding. Refer to Quarter Window Reveal Molding Replacement . Remove the weatherstrip from the upper pinchweld flange only. Refer to Front Side Door Weatherstrip Replacement - Body Side . Remove the rear quarter trim insert. Refer to Quarter Trim Panel Insert Replacement .

Preliminary Procedures

- Remove the quarter window reveal molding. Refer to Quarter Window Reveal Molding Replacement .
- Remove the weatherstrip from the upper pinchweld flange only. Refer to Front Side Door Weatherstrip Replacement - Body Side .
- Remove the rear quarter trim insert. Refer to Quarter Trim Panel Insert Replacement .

1 Quarter Window Bolt (Qty: 2) Caution: Refer to Fastener Caution . Note: Leave the window attached to the regulator when removing. Mark the regulator and window fore/aft and up and down at to the regulator clamps prior to transferring window. Tighten 10 Nm (89 lb in)

10 Nm (89 lb in)

2 Quarter Window Regulator Nut (Qty: 2) Procedure Quarter window adjustment screws Must be transferred to the new regulator. Note: If not replacing the regulator, just loosen the nuts. This will assist in the reinstalling and alignment of the window regulator Tighten 10 Nm (89 lb in)

Procedure

Quarter window adjustment screws Must be transferred to the new regulator.

3 Quarter Window Regulator Upper Side Bracket Screw (Qty: 2) Procedure Disconnect the electrical connector. Tighten 10 Nm (89 lb in)

Disconnect the electrical connector.

4 Quarter Window Regulator Procedure Remove the quarter window regulator motor . Refer to Quarter Window Regulator Motor Replacement .

Remove the quarter window regulator motor . Refer to Quarter Window Regulator Motor Replacement .