

Component Procedures: Exhaust Pressure Regulator Vacuum Solenoid

Table of Contents

1. Exhaust Tail Pipe Flow Control Valve Solenoid Replacement (Article 11993)

Component Procedures: Exhaust Pressure Regulator Vacuum Solenoid

Exhaust Tail Pipe Flow Control Valve Solenoid Replacement (Article 11993)

Callout Component Name

Preliminary Procedure Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .

Preliminary Procedure

Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .

1 Exhaust Valve Solenoid Cover Fastener Caution: Refer to Fastener Caution . Tighten 9 Nm (80 lb in)

2 Exhaust Valve Solenoid Cover

3 Vacuum Pipe Fitting

4 Vacuum Pipe Fitting

5 Solenoid Connector

6 Exhaust Valve Solenoid Procedure Remove the solenoid cover fastener (1) and remove the solenoid cover (2).

Remove the vacuum hoses (3) and (4). Remove the solenoid connector (5) and un-clip the solenoid from the bracket.

Procedure

- Remove the solenoid cover fastener (1) and remove the solenoid cover (2).
- Remove the vacuum hoses (3) and (4).
- Remove the solenoid connector (5) and un-clip the solenoid from the bracket.