

Component Procedures: Front Door Weatherstrip

Table of Contents

1. Front Side Door Bottom Auxiliary Sealing Strip Replacement (Article 10111)
2. Front Side Door Weatherstrip Replacement - Body Side (Convertible) (Article 10116)
3. Front Side Door Weatherstrip Replacement - Body Side (Coupe) (Article 10117)
4. Front Side Door Lower Auxiliary Weatherstrip Replacement (Article 10113)
5. All Technical Service Bulletins (itype_100)
6. Repair Tips (itype_110)

Component Procedures: Front Door Weatherstrip

Front Side Door Bottom Auxiliary Sealing Strip Replacement (Article 10111)

Callout Component Name

1 Front Side Door Bottom Auxiliary Seal Strip Retainer (Qty :14) Tip: Use a suitable tool to assist in the removal of the retainers.

2 Front Side Door Bottom Auxiliary Seal Strip

Front Side Door Weatherstrip Replacement - Body Side (Convertible) (Article 10116)

Callout Component Name

Preliminary Procedures Remove the front carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement . Remove the quarter window reveal molding. Refer to Quarter Window Reveal Molding Replacement .

Preliminary Procedures

- Remove the front carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement

- Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .

- Remove the quarter window reveal molding. Refer to Quarter Window Reveal Molding Replacement .

1 Front Side Door Weatherstrip Procedure Disengage/engage the weatherstrip retainers at the upper quarter panel. Installing the weatherstrip, starting at the base of the quarter window and lock pillar. Work the weatherstrip clockwise around the door ring seating the weatherstrip on the pinch weld flange. Be sure to tuck the forward portion of the weatherstrip under the windshield frame weatherstrip.

Procedure

- Disengage/engage the weatherstrip retainers at the upper quarter panel.

- Installing the weatherstrip, starting at the base of the quarter window and lock pillar. Work the weatherstrip clockwise around the door ring seating the weatherstrip on the pinch weld flange. Be sure to tuck the forward portion of the weatherstrip under the windshield frame weatherstrip.

Front Side Door Weatherstrip Replacement - Body Side (Coupe) (Article 10117)

Callout Component Name

Preliminary Procedure Remove the front carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement

Preliminary Procedure

Remove the front carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement

1 Front Side Door Weatherstrip Procedure When installing the weatherstrip start in the right upper corner (1) working counter clockwise around the door ring.

Procedure

When installing the weatherstrip start in the right upper corner (1) working counter clockwise around the door ring.

Front Side Door Lower Auxiliary Weatherstrip Replacement (Article 10113)

Callout Component Name

1 Front Side Door Lower Auxiliary Weatherstrip Retainer (Qty: 14) Procedure Open the front side door that the weatherstrip is being serviced. Using a suitable tool, removal of the weatherstrip and retainers. Using a suitable solution, clean the top surface of the rocker molding with a clean damp shop cloth.

Procedure

- Open the front side door that the weatherstrip is being serviced.

- Using a suitable tool, removal of the weatherstrip and retainers.

- Using a suitable solution, clean the top surface of the rocker molding with a clean damp shop cloth.

2 Front Side Door Lower Auxiliary Weatherstrip Procedure Install the auxiliary weatherstrip to the front top edge the rocker molding first then work the auxiliary weatherstrip rearward installing the retainers.

Install the auxiliary weatherstrip to the front top edge the rocker molding first then work the auxiliary weatherstrip rearward installing the retainers.

All Technical Service Bulletins (itype_100)

Tsbs

- Body - Squeak Noise When Closing Door (PIC6019, 2014/08/19)

Repair Tips (itype_110)

Tsbs

- Body - Squeak Noise When Closing Door (PIC6019, 2014/08/19)