

# **Component Procedures: Wiper Arm**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Windshield Wiper Arm Replacement (Article 10519)

# Component Procedures: Wiper Arm

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Wiper Arm > Right	92231675	Wiper Arm	0.00	
Wiper Arm > Left	92231674	Wiper Arm	54.48	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Wipers > Wiper Arm, R&R > Each	C	0.2	0.0

## Windshield Wiper Arm Replacement (Article 10519)

Callout Component Name

Preliminary Procedure Open and support the hood.

Preliminary Procedure

Open and support the hood.

1 Windshield Wiper Arm Nut Cap Note: Use a small flat-bladed tool in order to release the cap from the wiper arm .

2 Windshield Wiper Arm Nut Caution: Refer to Fastener Caution . Tighten 38 Nm (28 lb ft)  
38 Nm (28 lb ft)

3 Windshield Wiper Arm Procedure Grasp the outer end of the wiper arm and rock the arm back and forth while holding the wiper blade off the windshield. Lift the arm assembly from the wiper motor pivot shaft. Clean the knurls on the wiper motor pivot shaft with a soft wire brush. Align the wiper blade to the small clear circles in the lower windshield blackout and hold into position while torquing the nut. Electrically cycle the wiper arms and re-check the blade alignment to the lower windshield alignment circles.

Procedure

- Grasp the outer end of the wiper arm and rock the arm back and forth while holding the wiper blade off the windshield.
- Lift the arm assembly from the wiper motor pivot shaft.
- Clean the knurls on the wiper motor pivot shaft with a soft wire brush.
- Align the wiper blade to the small clear circles in the lower windshield blackout and hold into position while torquing the nut.
- Electrically cycle the wiper arms and re-check the blade alignment to the lower windshield alignment circles.