

Component Procedures: Hood Weatherstrip

Table of Contents

1. Hood Front Weatherstrip Replacement (Article 10121)
2. Hood Rear Weatherstrip Replacement (Article 10127)

Component Procedures: Hood Weatherstrip

Hood Front Weatherstrip Replacement (Article 10121)

Callout Component Name

1 Hood Front Weatherstrip Procedure Clean the area where the seal will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol and 50 percent water by volume, or high-flash naphtha.

Procedure

Clean the area where the seal will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol and 50 percent water by volume, or high-flash naphtha.

Hood Rear Weatherstrip Replacement (Article 10127)

Callout Component Name

1 Hood Rear Weatherstrip – Left Procedure Clean the area where the weatherstrip will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol and 50 percent water by volume, or high flash naphtha.

Procedure

Clean the area where the weatherstrip will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol and 50 percent water by volume, or high flash naphtha.

2 Hood Rear Weatherstrip– Right Procedure Clean the area where the weatherstrip will be mounted. Use a suitable solvent with a mixture of 50 percent isopropyl alcohol and 50 percent water by volume, or high flash naphtha.