

Component Procedures: Disc Brake Dust / Mud Shield

Table of Contents

1. Parts and Labor (itype_189)
2. Front Brake Shield Replacement (Article 10617)
3. Rear Brake Backing Plate Replacement (Article 10621)

Component Procedures: Disc Brake Dust / Mud Shield

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Front Brakes > Backing Plate?	92199930	Backing Plate	0.00	
Front Brakes > Backing Plate?	92199929	Backing Plate	0.00	
Rear Brakes > Backing Plate ?	92227528	Backing Plate	0.00	
Rear Brakes > Backing Plate ?	92227527	Backing Plate	0.00	

Front Brake Shield Replacement (Article 10617)

Removal Procedure

- Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .
- Remove the tire and wheel assembly. Refer to Tire and Wheel Removal and Installation .
- Remove the front disc brake rotor (1). Refer to Front Brake Rotor Replacement . Click for full-size image
- Remove the front brake shield bolts (1). Click for full-size image
- Remove the front brake shield (1). Click for full-size image

Installation Procedure

- Install the front brake shield (1). Click for full-size image
- Install the front brake shield bolts (1) and tighten to 9 Nm (80 lb in) . Click for full-size image
- Install the front disc brake rotor (1). Refer to Front Brake Rotor Replacement . Click for full-size image
- Install the tire and wheel assembly. Refer to Tire and Wheel Removal and Installation .

Rear Brake Backing Plate Replacement (Article 10621)

Callout Component Name

Warning: Refer to Brake Dust Warning . Preliminary Procedures Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle . Remove the tire and wheel assembly. Refer to Tire and Wheel Removal and Installation . Remove the park brake shoe s. Refer to Parking Brake Shoe Replacement . Remove the park brake actuator . Refer to Parking Brake Actuator Replacement . Remove the wheel hub and bearing assembly. Refer to Rear Wheel Bearing and Hub Replacement .

Preliminary Procedures

- Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .
- Remove the tire and wheel assembly. Refer to Tire and Wheel Removal and Installation .
- Remove the park brake shoe s. Refer to Parking Brake Shoe Replacement .
- Remove the park brake actuator . Refer to Parking Brake Actuator Replacement .
- Remove the wheel hub and bearing assembly. Refer to Rear Wheel Bearing and Hub Replacement .

1 Disc Brake Backing Plate