

Component Procedures: Console

Table of Contents

1. Front Floor Console Side Cover Replacement - Right Side (Article 10047)
2. Front Floor Console Side Cover Replacement - Left Side (Article 10046)
3. Front Floor Console Replacement (Article 10045)
4. Front Floor Console Armrest Replacement (Article 10041)
5. Front Floor Console Armrest Hinge Cover Replacement (Article 10040)
6. Front Floor Console Front Cover Replacement (w/ UMQ) (Article 10042)
7. Front Floor Console Front Cover Replacement (w/o UMQ) (Article 10043)
8. Front Floor Console Rear Cover Replacement (Article 10044)
9. Roof Console Replacement (Article 10071)

Component Procedures: Console

Front Floor Console Side Cover Replacement - Right Side (Article 10047)

Callout Component Name

1 Front Floor Console Side Cover Assembly - Right Procedure Use a flat bladed plastic trim tool and release the retainer clips securing the console side cover to the front floor console assembly.

Procedure

Use a flat bladed plastic trim tool and release the retainer clips securing the console side cover to the front floor console assembly.

Front Floor Console Side Cover Replacement - Left Side (Article 10046)

Callout Component Name

1 Front Floor Console Side Cover Assembly - Left Procedure Use a flat bladed plastic trim tool and release the retainer clips securing the console side cover to the front floor console assembly.

Procedure

Use a flat bladed plastic trim tool and release the retainer clips securing the console side cover to the front floor console assembly.

Front Floor Console Replacement (Article 10045)

Callout Component Name

Preliminary Procedures Remove the right and left front floor console side cover assemblies. Refer to Front Floor Console Side Cover Replacement - Right Side and Front Floor Console Side Cover Replacement - Left Side . Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement . Remove the front floor console front cover assembly. Refer to Front Floor Console Front Cover Replacement . Remove the transmission control lever knob, if equipped with a automatic transmission. Refer to Transmission Control Lever Knob Replacement . Remove the transmission control lever knob, if equipped with a manual transmission. Refer to Transmission Control Lever Knob Replacement or Transmission Control Lever Knob Replacement .

Preliminary Procedures

- Remove the right and left front floor console side cover assemblies. Refer to Front Floor Console Side Cover Replacement - Right Side and Front Floor Console Side Cover Replacement - Left Side .
- Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement .
- Remove the front floor console front cover assembly. Refer to Front Floor Console Front Cover Replacement .
- Remove the transmission control lever knob, if equipped with a automatic transmission. Refer to Transmission Control Lever Knob Replacement .
- Remove the transmission control lever knob, if equipped with a manual transmission. Refer to Transmission Control Lever Knob Replacement or Transmission Control Lever Knob Replacement .

1 Automatic Control Transmission Control Lever Housing Bezel Fastener (Qty: 4) Caution: Refer to Fastener Caution . Tighten 2.5 Nm (22 lb in)

2.5 Nm (22 lb in)

2 Automatic Control Transmission Control Lever Housing Bezel Procedure Disconnect the electrical connections. Procedure

Disconnect the electrical connections.

3 Front Floor Console Fastener (Qty: 4) Tighten 2.5 Nm (22 lb in)

4 Front Floor Console Assembly Procedure Disconnect the electrical connections. When replacing the front floor console assembly, transfer all necessary components.

- Disconnect the electrical connections.
- When replacing the front floor console assembly, transfer all necessary components.

Front Floor Console Armrest Replacement (Article 10041)

Callout Component Name

Preliminary Procedures Remove the right and left front floor console side cover assemblies. Refer to Front Floor Console Side Cover Replacement - Right Side and Front Floor Console Side Cover Replacement - Left Side . Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement .

Preliminary Procedures

- Remove the right and left front floor console side cover assemblies. Refer to Front Floor Console Side Cover Replacement - Right Side and Front Floor Console Side Cover Replacement - Left Side .
- Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement .

1 Front Floor Console Armrest Assembly Procedure Lift the front floor console armrest assembly to the full open position. Unsnap the armrest from the front floor console assembly.

Procedure

- Lift the front floor console armrest assembly to the full open position.
- Unsnap the armrest from the front floor console assembly.

Front Floor Console Armrest Hinge Cover Replacement (Article 10040)

Callout Component Name

- 1 Front Floor Console Armrest Bolt (Qty: 8) Caution: Refer to Fastener Caution .
- 2 Front Floor Console Armrest Hinge Cover

Front Floor Console Front Cover Replacement (w/ UMQ) (Article 10042)

Removal Procedure

- Apply the parking brake.
- Move the transmission shift assembly to the most rearward position possible.
- Pull the accessory power receptacle (1) up approximately 40 mm (1 5/8 inches). Refer to Accessory Power Receptacle Replacement . Click for full-size image
- Use a flat bladed plastic trim tool and release the retainer securing the cover (2) to the floor console assembly. Click for full-size image
- Lift the cover (2) up and rearward making sure that the accessory power receptacle (1) clears the transmission shift assembly.
- Disconnect the electrical connections.
- When replacing the front floor console front cover, transfer all necessary components.

Installation Procedure

- Before installing the front floor console front cover, loosely install the electronic traction control switch and the accessory power receptacle.
- Make sure the electronic traction control switch (1) is pulled out of the cover (3) approximately 25 mm (1 inch) and the accessory power receptacle (2) 40 mm (1 5/8 inches). Click for full-size image
- Connect the electrical connections.
- Install the front floor console front cover (3) to the floor console assembly.
- Fully install the electronic traction control switch (1) and the accessory power receptacle (2). Click for full-size image

Front Floor Console Front Cover Replacement (w/o UMQ) (Article 10043)

Callout Component Name

- 1 Front Floor Console Front Cover Assembly Procedure Use a flat bladed plastic trim tool and release the retainer tabs securing the front floor console front cover to the console assembly. Disconnect the electrical connections. When replacing the front floor console front trim cover, transfer all necessary components.

Procedure

- Use a flat bladed plastic trim tool and release the retainer tabs securing the front floor console front cover to the console assembly.
- Disconnect the electrical connections.
- When replacing the front floor console front trim cover, transfer all necessary components.

Front Floor Console Rear Cover Replacement (Article 10044)

Callout Component Name

- 1 Front Floor Console Side Cover - Right Refer to Front Floor Console Side Cover Replacement - Right Side
- 2 Front Floor Console Side Cover - Left Refer to Front Floor Console Side Cover Replacement - Left Side
- 3 Front Floor Console Rear Cover Fasteners (Qty: 4) Caution: Refer to Fastener Caution . Tighten 2.5 Nm (22 lb in)
- 2.5 Nm (22 lb in)
- 4 Front Floor Console Rear Cover

Roof Console Replacement (Article 10071)

Callout Component Name

- 1 Courtesy Lamp Assembly Refer to Courtesy Lamp Replacement .
- 2 Roof Console Fasteners (Qty: 2) Caution: Refer to Fastener Caution . Tighten 2.5 Nm (22 lb in)
- 2.5 Nm (22 lb in)
- 3 Roof Console Assembly Procedure Grasp the right and left sides of the roof console assembly and pull downward using equal force on each side in order to release the four retainer clips securing the roof console assembly to the headlining assembly. Disconnect the electrical connections. When replacing the roof console

assembly, transfer all necessary components.

Procedure

- Grasp the right and left sides of the roof console assembly and pull downward using equal force on each side in order to release the four retainer clips securing the roof console assembly to the headlining assembly.
- Disconnect the electrical connections.
- When replacing the roof console assembly, transfer all necessary components.