

Component Procedures: Keyless Entry Module

Table of Contents

1. Remote Function Actuator Module Replacement (w/ BTV) (Article 13250)
2. Remote Function Actuator Module Replacement (w/o BTV) (Article 13251)

Component Procedures: Keyless Entry Module

Remote Function Actuator Module Replacement (w/ BTV) (Article 13250)

Callout Component Name

1 Remote Control Door Lock Receiver Procedure Remove the receiver trim cover. Disconnect the electrical connector. Unsnap the receiver from the windshield bracket. For programming and set up, refer to Control Module References

Procedure

- Remove the receiver trim cover.
- Disconnect the electrical connector.
- Unsnap the receiver from the windshield bracket.
- For programming and set up, refer to Control Module References

Remote Function Actuator Module Replacement (w/o BTV) (Article 13251)

Callout Component Name

Preliminary Procedure Remove the instrument cluster. Refer to Instrument Cluster Replacement .

Preliminary Procedure

Remove the instrument cluster. Refer to Instrument Cluster Replacement .

1 Remote Control Door Lock Receiver Procedure Reach through opening and unsnap the receiver from the instrument panel trim pad. Disconnect the electrical connector. For programming and set up, refer to Control Module References .

Procedure

- Reach through opening and unsnap the receiver from the instrument panel trim pad.
- Disconnect the electrical connector.
- For programming and set up, refer to Control Module References .