

Component Procedures: Oil Pick Up/Strainer

Table of Contents

1. Parts and Labor (itype_189)
2. Oil Pump Suction Pipe and Screen Assembly Replacement (Article 12192)

Component Procedures: Oil Pick Up/Strainer

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Oil Pick-Up	12630636	34 - Oil Pick-up	45.61	

Oil Pump Suction Pipe and Screen Assembly Replacement (Article 12192)

Removal Procedure

- Remove the oil pan . Refer to Oil Pan Replacement .
- Remove the oil pan scraper bolts. Click for full-size image
- Remove the oil pan scraper.
- Remove the oil suction pipe bolts. Click for full-size image
- Remove the oil suction pipe .
- Remove the oil suction tube seal from the oil suction tube . Discard the oil suction tube seal. Click for full-size image

Installation Procedure

- Install a NEW oil suction tube seal onto the oil suction tube. DO NOT reuse the old oil suction tube seal. Click for full-size image
- Install the oil suction pipe. Click for full-size image
- Install the oil suction pipe bolts and tighten to 10 Nm (89 lb in) .
- Install the oil pan scraper. Click for full-size image
- Install the oil pan scraper bolts and tighten to 10 Nm (89 lb in) .
- Install the oil pan. Refer to Oil Pan Replacement .