

Component Procedures: Transmission Position Sensor/Switch

Table of Contents

1. Parts and Labor (itype_189)
2. 6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13944)

Component Procedures: Transmission Position Sensor/Switch

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Range Sensor, R&R	B	1.4	1.0

6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13944)

Non Standards

- Manual Shift Shaft Position Switch Replacement (13945)