

Component Procedures: Headlamp Washer Hose

Table of Contents

1. Headlamp Washer Hose Replacement (Article 10508)

Component Procedures: Headlamp Washer Hose

Headlamp Washer Hose Replacement (Article 10508)

Callout Component Name

Preliminary Procedures Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement . Disconnect the headlamp washer pump jumper hose from the main headlamp washer hose assembly. Disengage the center retainer for the main electrical harness and remove the harness from the clips within the front bumper energy absorber.

Preliminary Procedures

- Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .
- Disconnect the headlamp washer pump jumper hose from the main headlamp washer hose assembly.
- Disengage the center retainer for the main electrical harness and remove the harness from the clips within the front bumper energy absorber.

1 Headlamp Washer Pump Jumper Hose Tip: Disconnect the jumper from the main headlamp washer hose.

2 Headlamp Washer Hose Assembly Procedure Disengage the center retainer securing the headlamp washer hose to the front bumper energy absorber. Disconnect both hose elbows from the headlamp washer nozzle s. Release and remove the headlamp washer hose from the retention clips on the front bumper energy absorber.

Procedure

- Disengage the center retainer securing the headlamp washer hose to the front bumper energy absorber.
- Disconnect both hose elbows from the headlamp washer nozzle s.
- Release and remove the headlamp washer hose from the retention clips on the front bumper energy absorber.