

# **Component Procedures: Headlamp Washer Spray Nozzle**

## **Table of Contents**

1. Headlamp Washer Nozzle Replacement (Article 10509)

# Component Procedures: Headlamp Washer Spray Nozzle

## Headlamp Washer Nozzle Replacement (Article 10509)

Callout Component Name

Preliminary Procedures Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement . Disconnect the headlamp washer pump hose from the main headlamp washer nozzle assembly.

Preliminary Procedures

- Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .

- Disconnect the headlamp washer pump hose from the main headlamp washer nozzle assembly.

1 Headlamp Washer Hose Tip: Disconnect the headlamp washer hose from the headlamp washer nozzle spout.

2 Headlamp Washer Nozzle Assembly Procedure Pinch the tabs inward on the washer nozzle and push the nozzle upward and forward out of the front bumper fascia. Remove the headlamp washer nozzle.

Procedure

- Pinch the tabs inward on the washer nozzle and push the nozzle upward and forward out of the front bumper fascia.

- Remove the headlamp washer nozzle.