

# Component Procedures: Transmission Speed Sensor

## Table of Contents

1. Parts and Labor (itype\_189)
2. Automatic Transaxle (Article 44450)
3. Automatic Transaxle (Article 44454)
4. Automatic Transaxle (Article 44458)
5. Automatic Transaxle (Article 44452)
6. All Technical Service Bulletins (itype\_100)

# Component Procedures: Transmission Speed Sensor

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Automatic Transaxle > Input Sensor, R&R	B	2.5	0.0
Remove & Replace	Automatic Transaxle > Output Sensor, R&R	B	2.5	0.0

### Automatic Transaxle (Article 44450)

#### Non Standards

- Input Speed Sensor - Description and Operation (44451)
- Output Speed Sensor - Description and Operation (44460)

### Automatic Transaxle (Article 44454)

#### Non Standards

- Input Speed Sensor - Schematic Diagrams (44455)
- Output Speed Sensor - Schematic Diagrams (44462)

### Automatic Transaxle (Article 44458)

#### Non Standards

- Input Speed Sensor - Repair Procedures (44459)
- Output Speed Sensor - Repair Procedures (44464)

### Automatic Transaxle (Article 44452)

#### Non Standards

- Input Speed Sensor - Specifications (44453)
- Output Speed Sensor - Specifications (44461)

### All Technical Service Bulletins (itype\_100)

#### Tsbs

- AUTOMATIC TRANSAXLE INPUT/OUTPUT SPEED SENSOR DTC P071700, P072100 & P072200 (20-AT-012H, 2020/03/25)