

# **Component Procedures: Fuel Door**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Fuel Filler Door - Components and Components Location (Article 45134)
3. Fuel Filler Door - Repair Procedures (Article 45135)

# Component Procedures: Fuel Door

## Parts and Labor (itype\_189)

### Parts


Qualifier	Part #	Name	Price	Note
Fuel Door	81590F2000	Actuator	90.95	
Fuel Door	81590F2000	Release Cable	90.95	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Fuel Door > Lock Actuator, R&R	B	0.6	0.0
Remove & Replace	Fuel Door > Release Cable, R&R	B	0.9	0.0

## Fuel Filler Door - Components and Components Location (Article 45134)

- Component Location

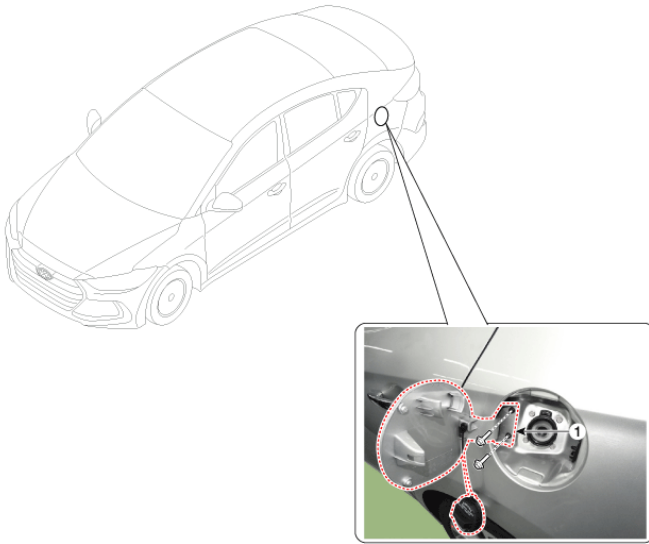

1. Fuel filler door

## Fuel Filler Door - Repair Procedures (Article 45135)

- Replacement

[ Fuel filler door ]

Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

# NOTICE


- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Open the fuel filler door (A).

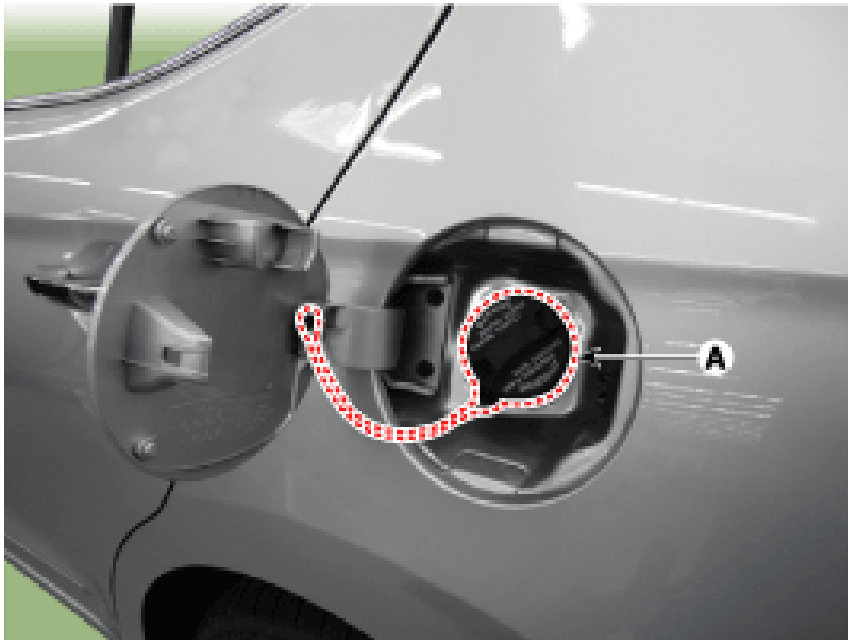

- Loosen the mounting bolts and remove the fuel filler door (A). Tightening torque : 3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

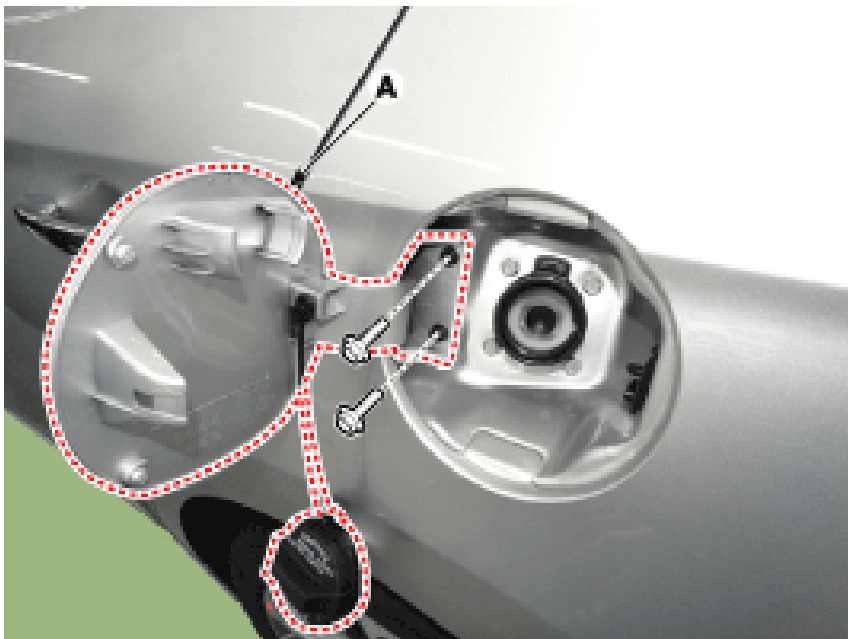

- To install, reverse the removal procedure. Make sure the fuel filler door locks / unlocks and opens / closes properly.  
Make sure the fuel filler door locks / unlocks and opens / closes properly.

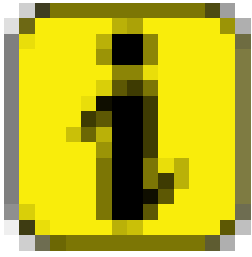

# Information


- Make sure the fuel filler door locks / unlocks and opens / closes properly.

[Fuel filler door cable]

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Take care not to scratch the body surface.


- Take care not to scratch the body surface.
- Remove the front seat assembly. (Refer to Front Seat - "Front Seat Assembly")
- Remove the rear seat assembly. (Refer to rear Seat - "Rear Seat Assembly")
- Remove the floor console assembly. (Refer to Floor Console - "Floor Console Assembly")
- Remove the center pillar lower trim. (Refer to Interior Trim - "Center Pillar Trim")
- Remove the cowl side trim. (Refer to Interior Trim - "Cowl Side Trim")
- Remove the luggage side trim. (Refer to Interior Trim - "Cowl Side Trim")
- Remove the floor carpet . (Refer to "Floor carpet")
- Loosen the mounting bolt and remove the fuel filler door catch (A). Tightening torque : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)
- Disconnect the fuel filler door barcket (A), remove the cable (B).



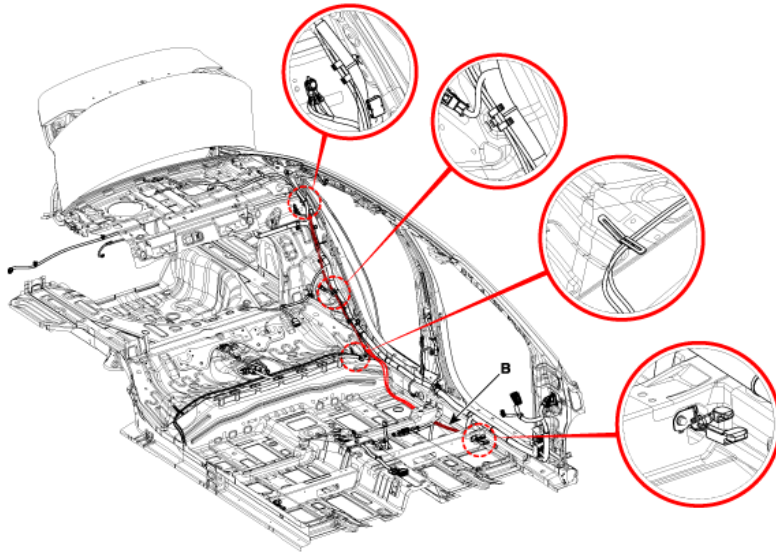

[Fuel filler door catch]

- Remove the front seat assembly [LH]. (Refer to Front Seat - "Front Seat Assembly")
- Remove the front door scuff trim [LH]. (Refer to Interior Trim - "Front Door Scuff Trim")
- Remove the cowl side trim [LH]. (Refer to Interior Trim - "Cowl Side Trim")
- Separate the floor carpet to obtain space for removing the rear heating duct.
- Loosen the fuel filler door catch mounting bolt (A). Tightening torque : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)

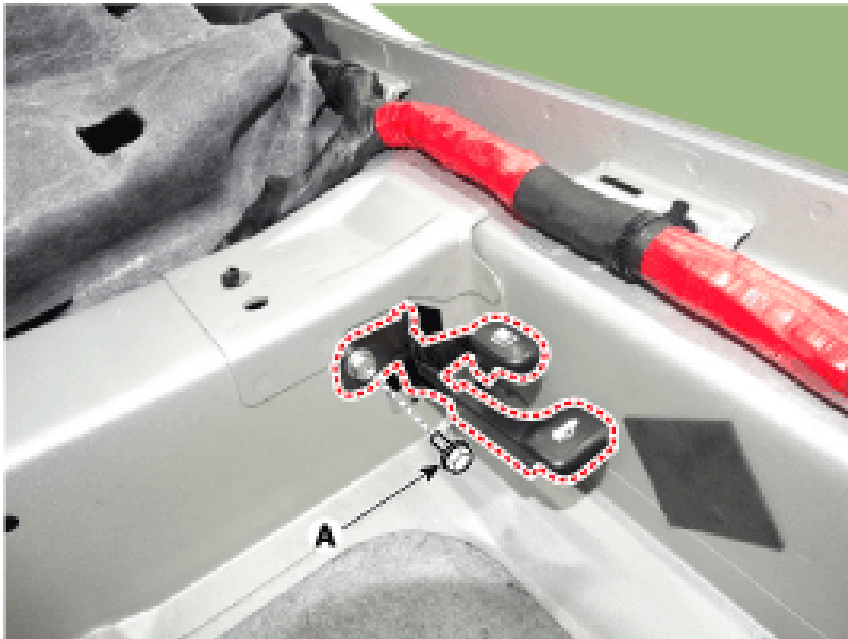

- Detach the cable (A) and remove the fuel filler door catch (B).

