

Component Procedures: Steering Angle Sensor

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Steering Angle Sensor

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Calibrate	Steering Column > Position Sensor, Calibrate	B	0.4	0.0