

Component Procedures: Headliner


Table of Contents

1. Roof Trim - Components and Components Location (Article 45027)
2. Roof Trim Assembly - Components and Components Location (Article 45032)
3. Roof Trim Assembly - Repair Procedures (Article 45033)

Component Procedures: Headliner


Roof Trim - Components and Components Location (Article 45027)

- Components (1)
[General Type]

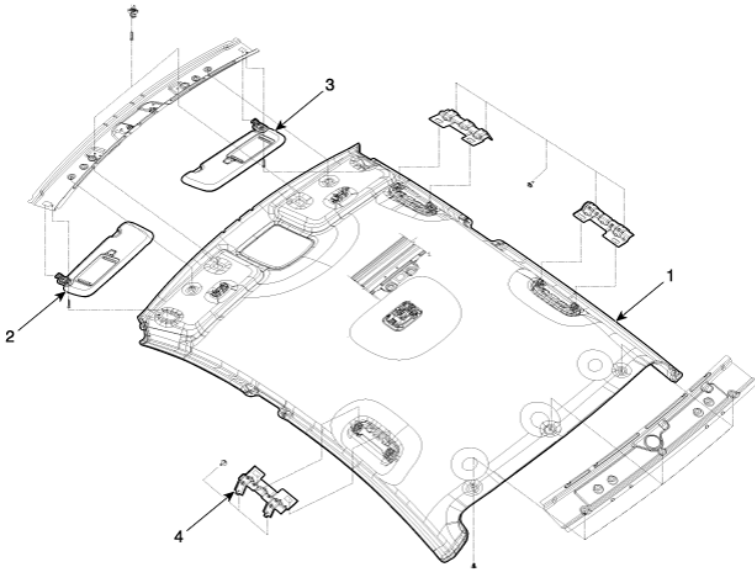


1. Roof trim 2. Sunvisor [LH] 3. Sunvisor [RH] 4. Assist handle

- Components (2)
[Sunroof Type]

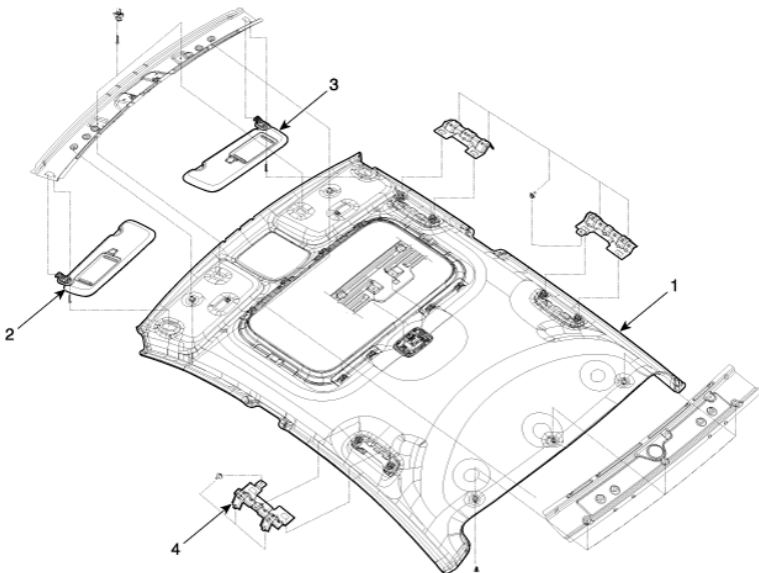

Roof Trim Assembly - Components and Components Location (Article 45032)

- Component Location

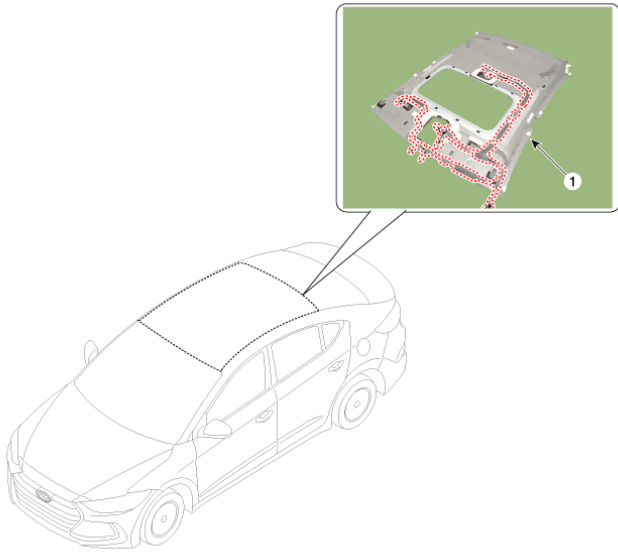

1. Roof Trim Assembly

Roof Trim Assembly - Repair Procedures (Article 45033)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.

- Remove the door weatherstrip .


- Remove the front seat. (Refer to Front Seat - "Front Seat Assembly")

- Remove the rear seat. (Refer to Rear Seat - "Rear Seat Assembly")

- Remove the front pillar trim. (Rear to Interior Trim - "Front Pillar Trim")

- Remove the center pillar lower trim. (Rear to Interior Trim - "Center Pillar Trim")

- Remove the center pillar upper trim. (Rear to Interior Trim - "Center Pillar Trim")
- Remove the rear pillar trim. (Rear to Interior Trim - "Rear Pillar Trim")
- Remove the sunvisor and retainer. (Rear to Roof Trim - "Sunvisor")
- Remove the assist handle. (Rear to Roof Trim - "Assist Handle")
- Remove the overhead console lamp . (Rear to Body Electrical System - "Overhead Console Lamp")
- Remove the room lamp. (Rear to Body Electrical System - "Room Lamp")
- Disconnect the ECM mirror connector. (Refer to Body Electrical System - "Electro Chromic Inside Rear View Mirror")
- Disconnect the rain sensor connector. (Refer to Body Electrical System - "Rain Sensor")
- Disconnect the roof trim main connector (A) and the mounting clips in the front pillar.

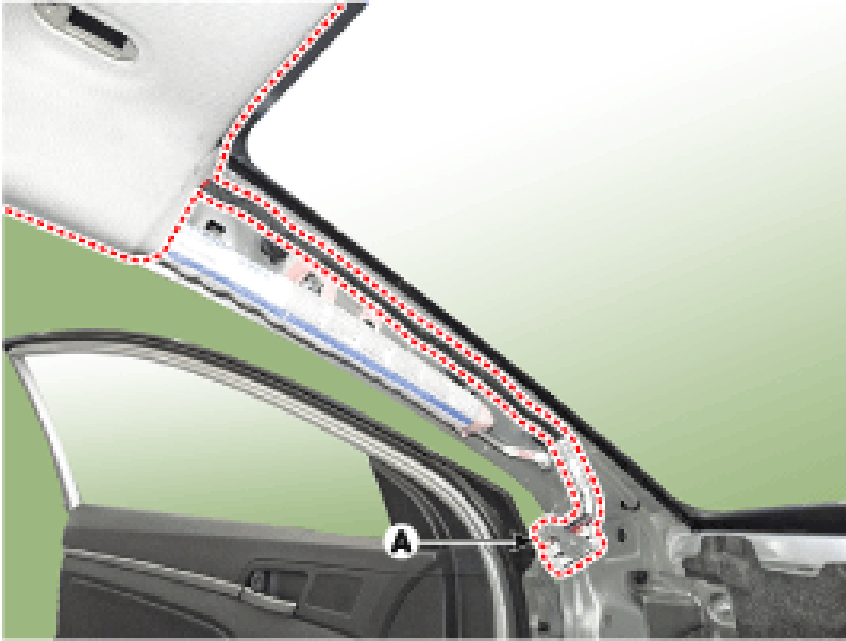


- Disconnect the sunroof motor connector (A).




- Remove the roof trim mounting clip and remove the roof trim assembly (A). Be careful not to wrinkle on the roof trim.

Be careful not to wrinkle on the roof trim.


- Be careful not to wrinkle on the roof trim.

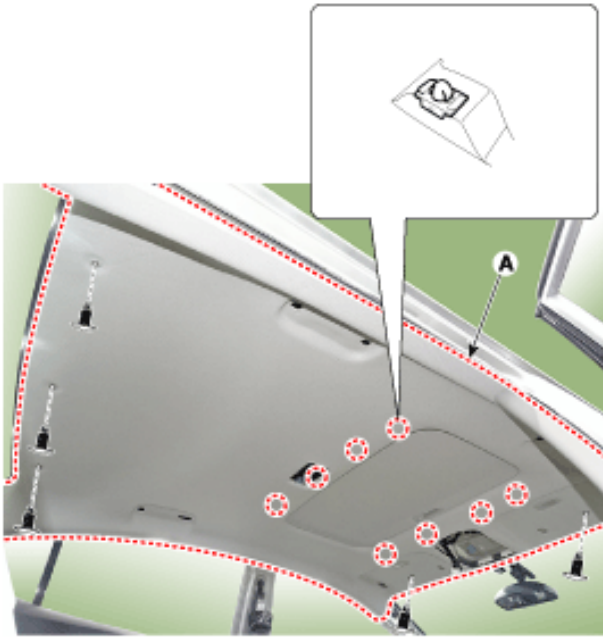


- Remove the roof trim assembly (A) from the body panel and then carry it out of the vehicle through the rear door .

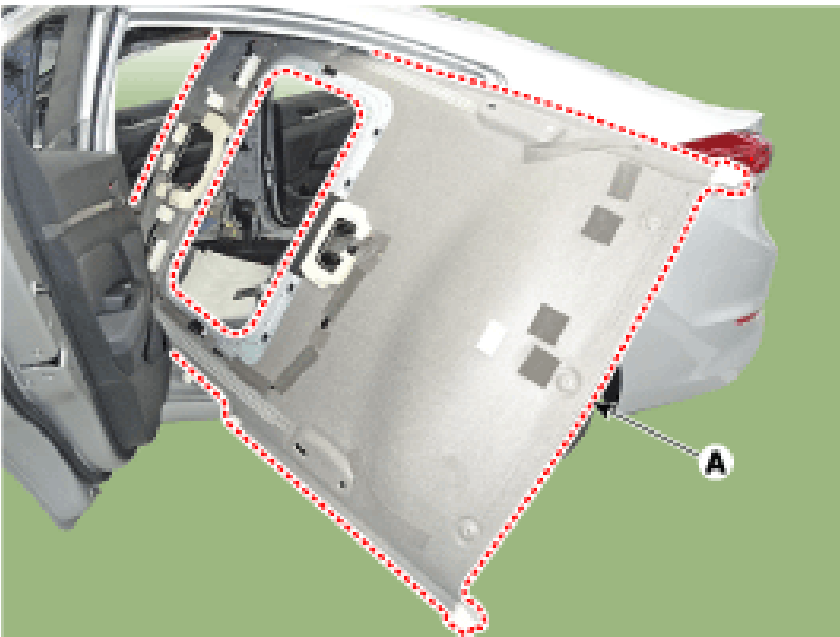

- Remove the vanity lamp.
- Remove roof trim wiring harness (A) from the roof trim (B). Take care not to damage the roof trim wiring harness (A) when removing. When installing the roof trim wiring harness (A) on the roof trim (B), apply the hot melt continuously by using the hot melt gun tool. Put anti-noise pad on roof trim (B) to prevent the noise.
- Take care not to damage the roof trim wiring harness (A) when removing.
- Take care not to damage the roof trim wiring harness (A) when removing.

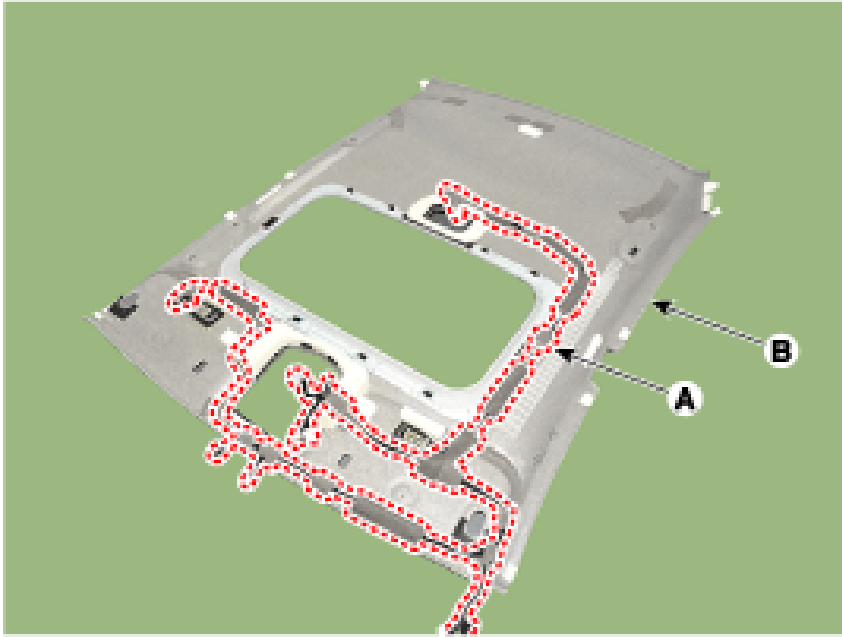

When installing the roof trim wiring harness (A) on the roof trim (B), apply the hot melt continuously by using the hot melt gun tool. Put anti-noise pad on roof trim (B) to prevent the noise.

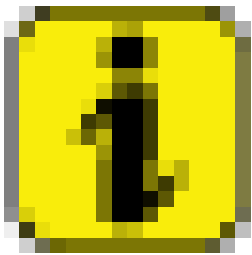

Information

- When installing the roof trim wiring harness (A) on the roof trim (B), apply the hot melt continuously by using the hot melt gun tool.
 - Put anti-noise pad on roof trim (B) to prevent the noise.
 - To install, reverse the removal procedure. Make sure the connector is connected in properly. Replace any damaged clips.
- Make sure the connector is connected in properly. Replace any damaged clips.
- Make sure the connector is connected in properly.
 - Replace any damaged clips.