

Component Procedures: Shift Solenoid

Table of Contents

1. Parts and Labor (itype_189)
2. Automatic Transaxle (Article 44366)
3. Automatic Transaxle (Article 44376)
4. Automatic Transaxle (Article 44374)
5. Automatic Transaxle (Article 44380)
6. Automatic Transaxle (Article 44368)
7. Automatic Transaxle (Article 44368)
8. Automatic Transaxle (Article 44372)
9. All Technical Service Bulletins (itype_100)

Component Procedures: Shift Solenoid

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Case & Related Parts > Solenoid, R&R	B	3.6	0.0

Automatic Transaxle (Article 44366)

Non Standards

- 35R Clutch Control Solenoid Valve (35R/C-VFS) - Description and Operation (44367)
- Brake Control Solenoid Valve (26/B-VFS) - Description and Operation (44481)
- Overdrive Clutch Control Solenoid Valve (OD/C VFS) - Description and Operation (44390)
- SS-A Solenoid Valve (On/Off) - Description and Operation (44398)
- Underdrive Brake Control Solenoid Valve (UD/B-VFS) - Description and Operation (44382)

Automatic Transaxle (Article 44376)

Non Standards

- 26 Brake Control Solenoid Valve (26/B-VFS) - Schematic Diagrams (44486)
- 35R Clutch Control Solenoid Valve (35R/C-VFS) - Schematic Diagrams (44377)
- Overdrive Clutch Control Solenoid Valve (OD/C VFS) - Schematic Diagrams (44395)
- SS-A Solenoid Valve (On/Off) - Schematic Diagrams (44401)
- Underdrive Brake Control Solenoid Valve (UD/B-VFS) - Schematic Diagrams (44387)

Automatic Transaxle (Article 44374)

Non Standards

- 26 Brake Control Solenoid Valve (26/B_VFS) - Components and Components Location (44485)
- 35R Clutch Control Solenoid Valve (35R/C_VFS) - Components and Components Location (44375)
- Overdrive Clutch Control Solenoid Valve (OD/C_VFS) - Components and Components Location (44394)
- SS-A Solenoid Valve (On/Off) - Components and Components Location (44400)
- Underdrive Brake Control Solenoid Valve (UD/B_VFS) - Components and Components Location (44386)

Automatic Transaxle (Article 44380)

Non Standards

- 26 Brake Control Solenoid Valve (26/B-VFS) - Repair Procedures (44488)
- 35R Clutch Control Solenoid Valve (35R/C-VFS) - Repair Procedures (44381)
- Overdrive Clutch Control Solenoid Valve (OD/C VFS) - Repair Procedures (44397)
- SS-A Solenoid Valve (On/Off) - Repair Procedures (44403)
- Underdrive Brake Control Solenoid Valve (UD/B-VFS) - Repair Procedures (44389)

Automatic Transaxle (Article 44368)

Non Standards

- 26 Brake Control Solenoid Valve (26/B-VFS) - Specifications (44482)
- 35R Clutch Control Solenoid Valve 35R/C-VFS) - Specifications (44369)
- Overdrive Clutch Control Solenoid Valve (OD/C VFS) - Specifications (44391)
- SS-A Solenoid Valve (On/Off) - Specifications (44399)
- Underdrive Brake Control Solenoid Valve (UD/B-VFS) - Specifications (44383)

Automatic Transaxle (Article 44368)

Non Standards

- SS-A Solenoid Valve (On/Off) - Specifications (44399)

Automatic Transaxle (Article 44372)

Non Standards

- 26 Brake Control Solenoid Valve (26/B-VFS) - Specifications (44484)
- 35R Clutch Control Solenoid Valve 35R/C-VFS) - Specifications (44373)
- Overdrive Clutch Control Solenoid Valve (OD/C VFS) - Specifications (44393)
- Underdrive Brake Control Solenoid Valve (UD/B-VFS) - Specifications (44385)

All Technical Service Bulletins (itype_100)

Tsbs

- AUTOMATIC TRANSAXLE SOLENOID DTC P074100, P074300, P074800, P075300, P075800, P076300, P076800, P077300
(20-AT-007H, 2020/02/21)