

Component Procedures: Amplifier

Table of Contents

1. Component Location and Function (Amplifier) (Article 28425)
2. External Amp - Components and Components Location (AVN System) (Article 44754)
3. External Amp - Repair Procedures (AVN System) (Article 44755)

Component Procedures: Amplifier

Component Location and Function (Amplifier) (Article 28425)

- Front Door Speaker
Front Door Speaker

**Image not available at the
time of publish.**

**Image not available at the
time of publish.**

1. Front Left Door Speaker
2. Front Right Door Speaker
- Tweeter Speaker
Tweeter Speaker

**Image not available at the
time of publish.**

**Image not available at the
time of publish.**

1. Front Left Tweeter Speaker
 2. Front Right Tweeter Speaker
- Rear Door Speaker
Rear Door Speaker

**Image not available at the
time of publish.**

**Image not available at the
time of publish.**

1. Rear Left Door Speaker
 2. Rear Right Door Speaker
- Center Speaker
Center Speaker

**Image not available at the
time of publish.**

 


1. Center Speaker
- Woofer Speaker
Woofer Speaker

**Image not available at the
time of publish.**

1. Subwoofer Speaker

External Amp - Components and Components Location (AVN System) (Article 44754)

- Components

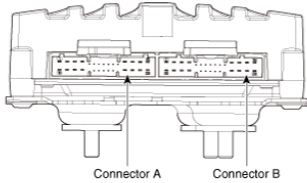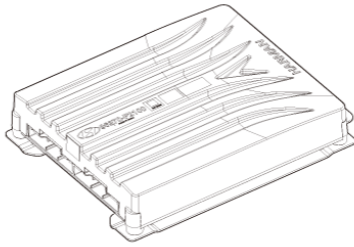


No Connector A No Connector B

- 1 BATT (+) 1 Subwoofer 2 (+)
- 2 BATT (+) 2 Subwoofer 1 (+)
- 3 BATT (+) 3 Front door tweeter speaker - RH (+)
- 4 BATT (+) 4 Front door tweeter speaker - LH (+)
- 5 - 5 -
- 6 Multimedia CAN (High) 6 -
- 7 Multimedia CAN (Low) 7 -
- 8 ACC 8 -
- 9 Navigation voice (+) 9 -
- 10 - 10 -
- 11 - 11 -
- 12 - 12 Rear door speaker - RH (+)
- 13 - 13 Rear door speaker - LH (+)
- 14 - 14 Center speaker (+)
- 15 - 15 -
- 16 Ground 16 Subwoofer 2 (-)
- 17 Ground 17 Subwoofer 1 (-)
- 18 Ground 18 Front door tweeter speaker - RH (-)
- 19 Ground 19 Front door tweeter speaker - LH (-)
- 20 SPDIF (High) 20 -
- 21 SPDIF (Low) 21 -
- 22 SPDIF GND 22 -
- 23 Navigation voice (-) 23 -
- 24 - 24 -
- 25 - 25 Rear door speaker - RH (-)
- 26 - 26 Rear door speaker - LH (-)
- 27 - 27 Center speaker (+)
- 28 - 28 -

External Amp - Repair Procedures (AVN System) (Article 44755)

- Removal
- Disconnect the negative (-) battery terminal.
- Open the trunk, remove the right luggage side trim.
- Remove the external amplifier (B) after disconnecting the connector (A) and loosening the mounting nuts.

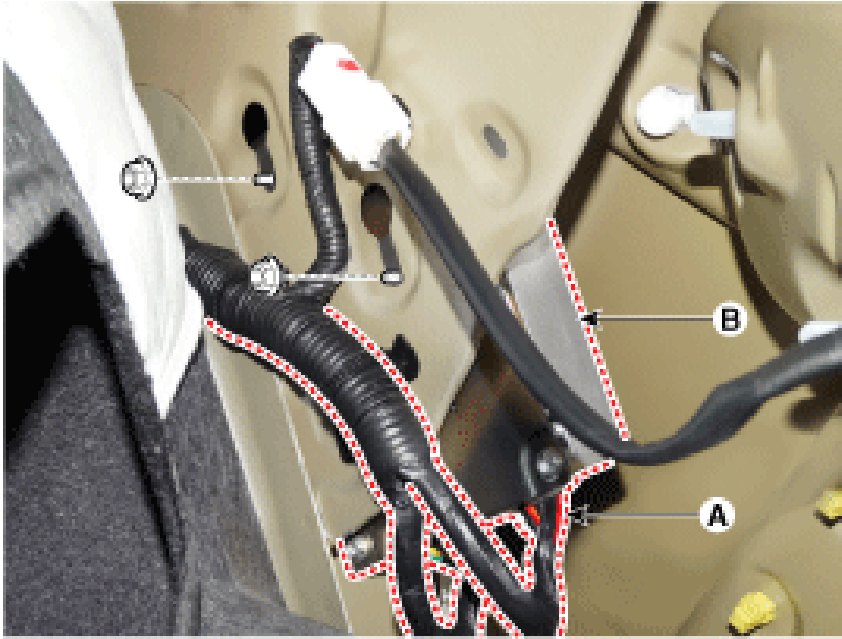

- Installation
 - Install the external amplifier after connecting the connector.
 - Install the right luggage side trim.
 - Connect the negative (-) battery terminal. Make sure that the cables and connectors are plugged in properly. Check the AVN system.
- Make sure that the cables and connectors are plugged in properly. Check the AVN system.

NOTICE

- Make sure that the cables and connectors are plugged in properly.
- Check the AVN system.