

# **Component Procedures: Sun Visor**


## **Table of Contents**

1. Sunvisor - Components and Components Location (Article 45028)
2. Sunvisor - Repair Procedures (Article 45029)

## Component Procedures: Sun Visor

### Sunvisor - Components and Components Location (Article 45028)

- Component Location

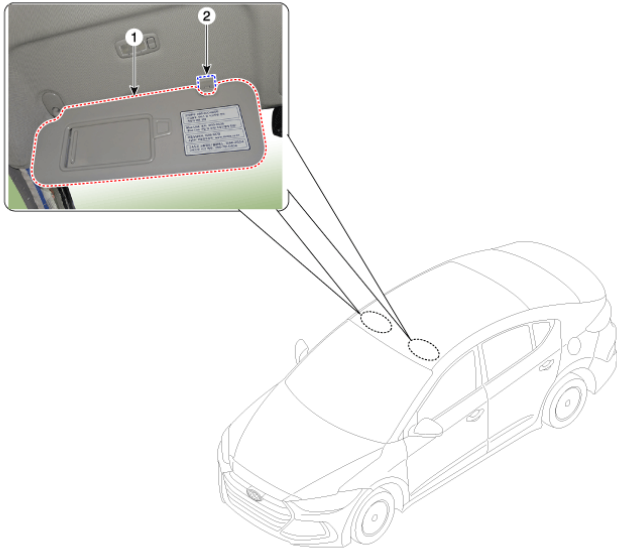

1. Sunvisor 2. Retainer

### Sunvisor - Repair Procedures (Article 45029)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.

- Loosen the mounting screw and separate the sunvisor (A).

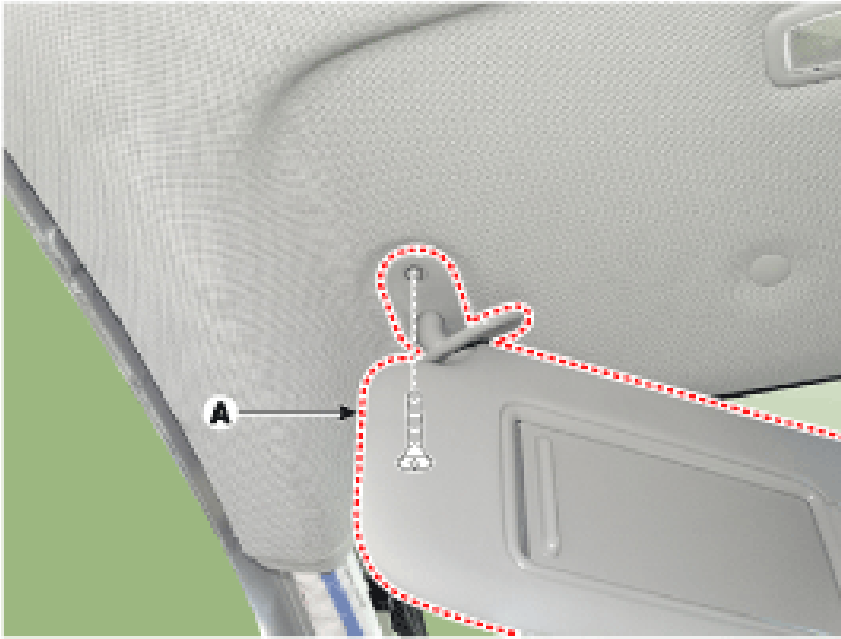

- Loosen the mounting screws and remove the retainer (A).

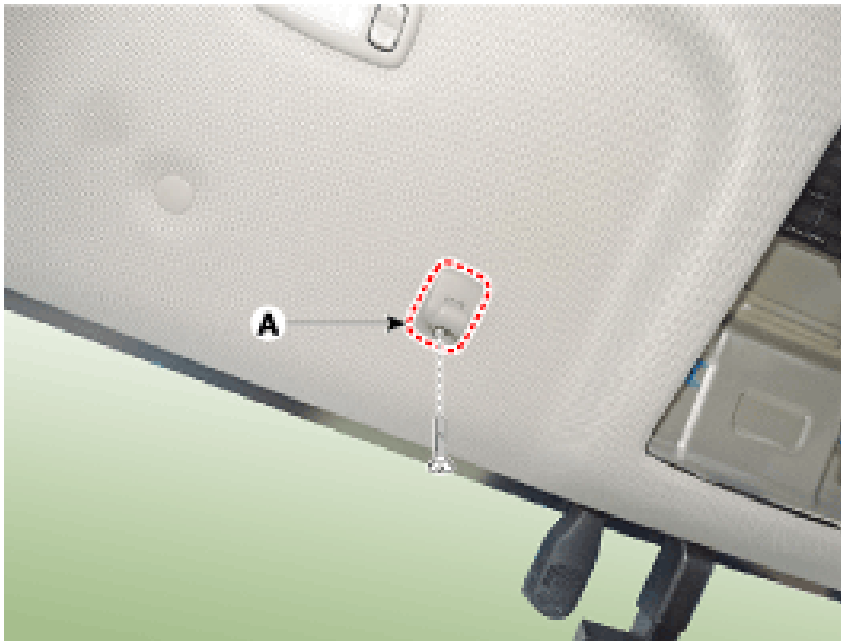

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).  
Replace any damaged clips (or pin-type retainers).



# Information

- Replace any damaged clips (or pin-type retainers).