

# **Component Procedures: Clutch Pedal Assembly**


## **Table of Contents**

1. Clutch Pedal - Components and Components Location (Article 45242)
2. Clutch Pedal - Repair Procedures (Article 45243)

# Component Procedures: Clutch Pedal Assembly

## Clutch Pedal - Components and Components Location (Article 45242)

- Components

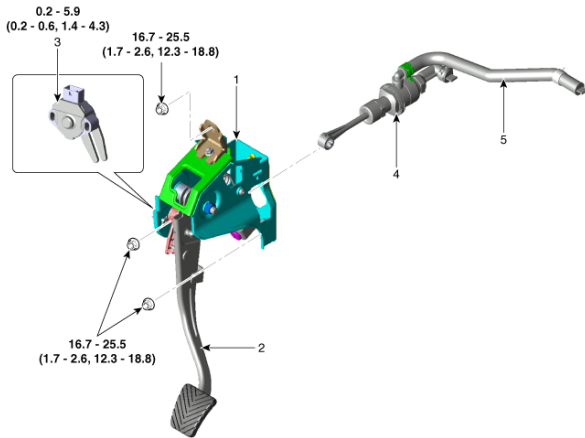

Tightening torque : N.m (kgf.m, lb-ft)

1. Clutch pedal assembly 2. Clutch pedal arm 3. Ignition lock & Clutch switch 4. Clutch master cylinder 5. Reservoir hose


## Clutch Pedal - Repair Procedures (Article 45243)

- Removal

- Turn ignition switch OFF and disconnect the negative (-) battery cable.
- Remove the crash pad lower pannel. (Refer to Body - "Crash pad")
- Remove the clutch master cylinder . (Refer to Clutch System - "Clutch Matser Cylinder")
- Disconnect the ignition lock & clutch switch connector (A).



- Remove the clutch pedal assembly (A) after losening the bolts (B-3ea). Tightening torque : 16.7 - 25.5 N.m (1.7 - 2.6 kgf.m, 12.3 - 18.8 lb-ft)

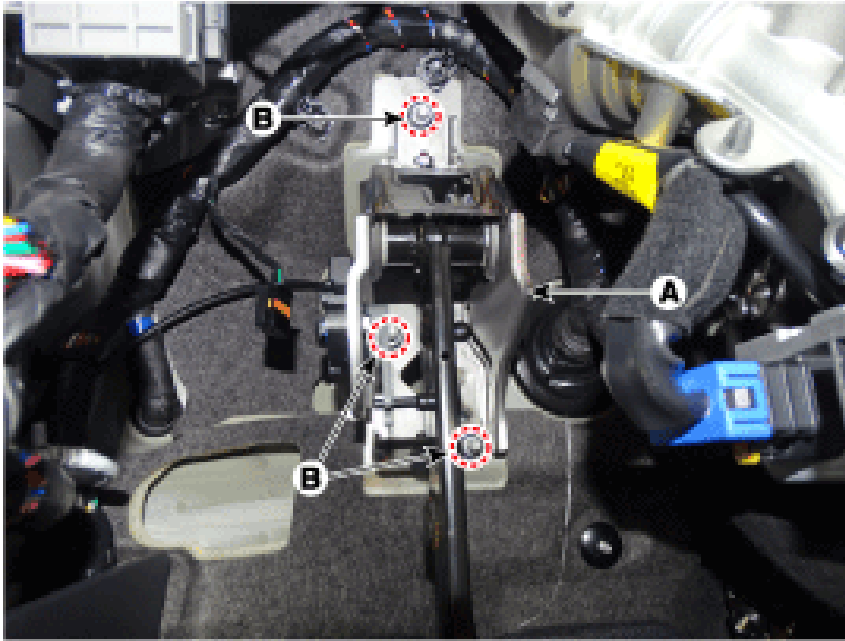

- Installation
- Install in the reverse order of removal.
- Perform bleeding air procedure in clutch release cylinder after pouring the brake fluid. (Refer to Clutch Release Cylinder - "Adjustment")