

Component Procedures: Traction Control Switch

Table of Contents

1. Parts and Labor (itype_189)
2. ESC OFF Switch - Description and Operation (Article 45209)
3. ESC OFF Switch - Repair Procedures (Article 45210)

Component Procedures: Traction Control Switch

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Stability Control > Switch, R&R	B	0.5	0.0

ESC OFF Switch - Description and Operation (Article 45209)


- Description
- The ESC OFF switch is for the user to turn off the ESP system.
- The ESC OFF lamp is on when ESP OFF switch is engaged.

ESC OFF Switch - Repair Procedures (Article 45210)

- Removal
- Turn ignition switch OFF and disconnect the negative (-) battery cable.
- Remove the crash pad lower panel. (Refer to Body - "Crash Pad")
- Remove the side crash pad switch .



- Disconnect the ESC OFF switch connector.

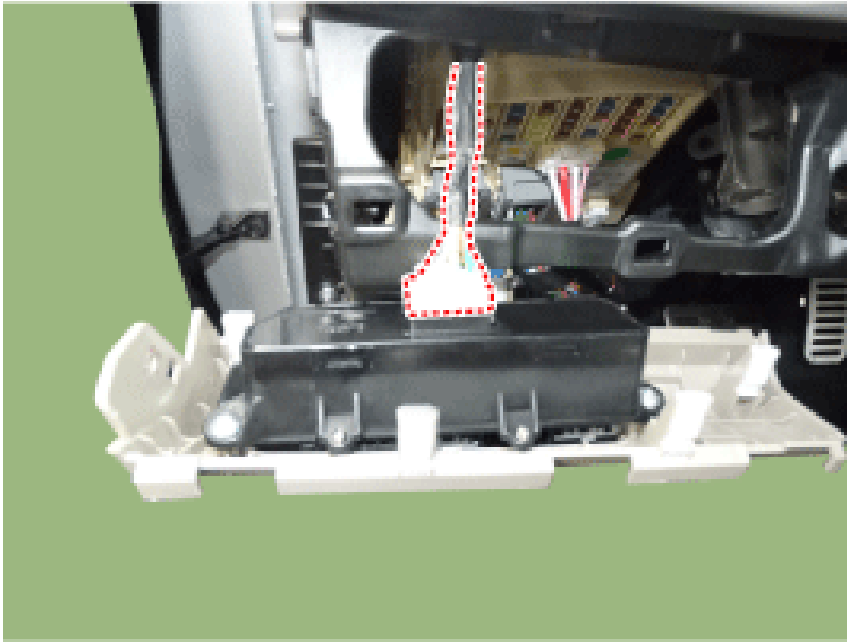

- Check the continuity between the switch terminals as the ESC OFF switch is engaged.

