

# **Component Procedures: Power Seat Motor Position Sensor**

## **Table of Contents**

1. Parts and Labor (itype\_189)

# Component Procedures: Power Seat Motor Position Sensor

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Power Seats > Limit Switch, R&R > One Side	B	0.4	0.0
Remove & Replace	Power Seats > Limit Switch, R&R > Both Sides	B	0.5	0.0