

Component Procedures: Steering Column Control Module

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Steering Column Control Module

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Steering Column > Control Module, R&R	B	0.8	0.0