

Component Procedures: Ambient Light Sensor

Table of Contents

1. Auto Light Sensor - Repair Procedures (Article 44662)

Component Procedures: Ambient Light Sensor



Auto Light Sensor - Repair Procedures (Article 44662)


- Inspection

Failure Occurrence : If auto light failure occurs, the head lamp must be turned ON regardless of sun light level. This is to prevent the head lamp from being turned OFF in case of auto light failure during night time.


NOTICE

- Failure Occurrence : If auto light failure occurs, the head lamp must be turned ON regardless of sun light level. This is to prevent the head lamp from being turned OFF in case of auto light failure during night time.

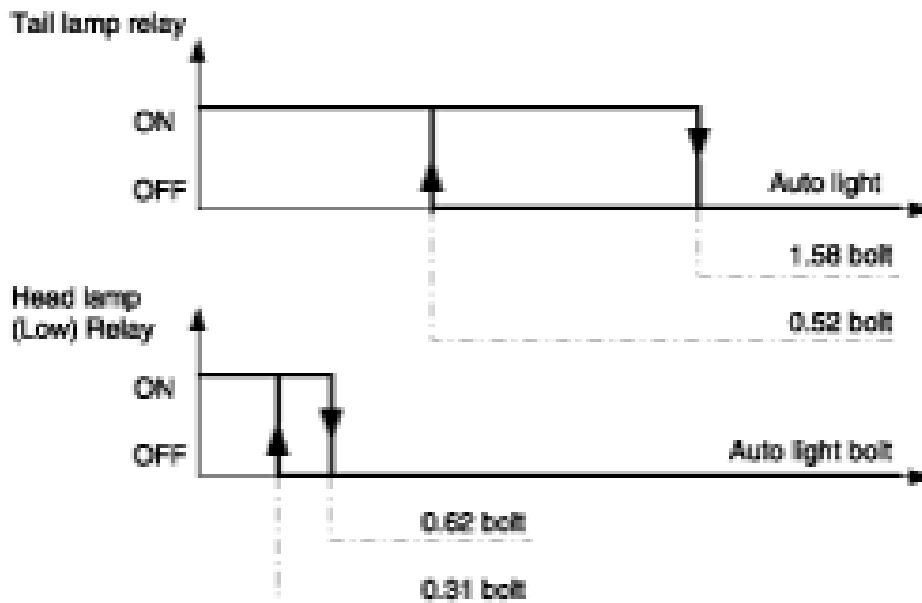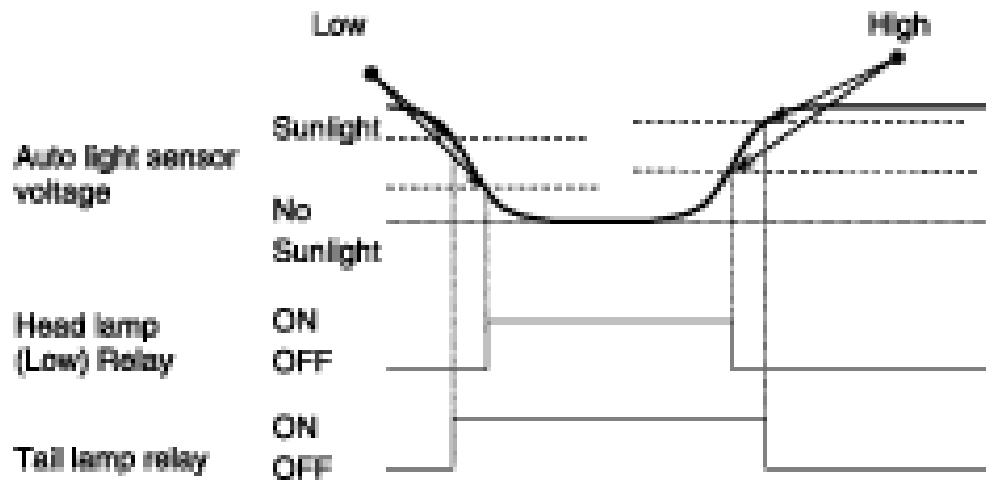

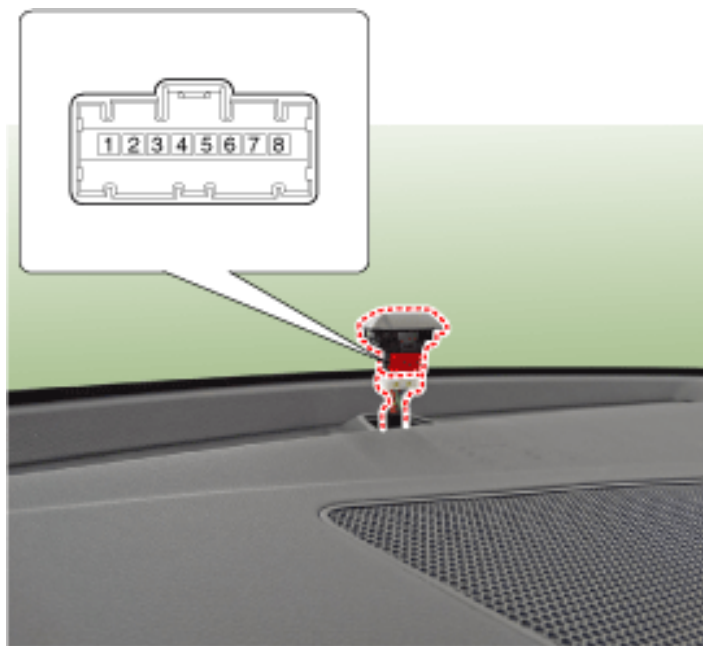

- Removal
- Disconnect the negative (-) battery terminal.
- Remove the auto light sensor (A) from crash pad upper side by using screw (-) driver.

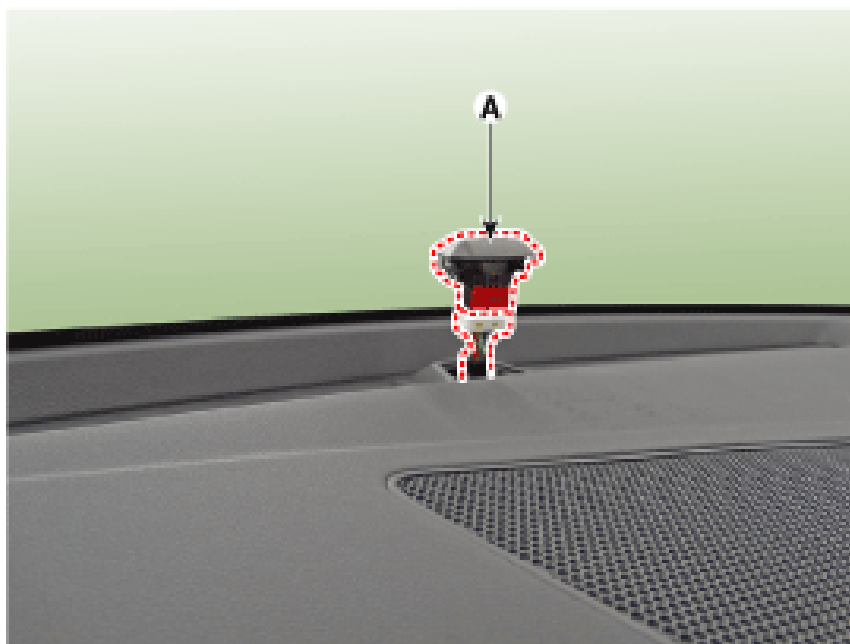

- Disconnect the auto light sensor connector.
- Installation
- Reconnect the auto light sensor connector.
- Install the auto light sensor.