

Component Procedures: Steering Column Cover

Table of Contents

1. Parts and Labor (itype_189)
2. Steering Column Shroud Panel - Components and Components Location (Article 45016)
3. Steering Column Shroud Panel - Repair Procedures (Article 45018)

Component Procedures: Steering Column Cover

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Steering Column > Lower Shro?	84855F3100TRY	4 - Lower Shroud	151.32	
Steering Column > Upper Shro?	84830F3500TRY	3 - Upper Shroud	416.63	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Steering Column > Shroud, R&R > Upper & Lower	C	0.3	0.0

Steering Column Shroud Panel - Components and Components Location (Article 45016)

- Component Location



1. Steering column shroud lower panel 2. Steering column shroud upper panel

Steering Column Shroud Panel - Repair Procedures (Article 45018)

- Replacement

[Steering column shroud lower panel]


Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.


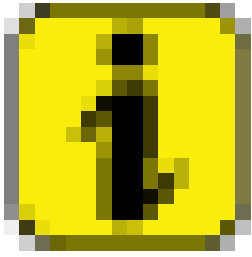


Information


- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.
- Remove the crash pad lower panel. (Refer to Crash Pad - "Crash Pad Lower Panel")
- Loosen the mounting screws by turning the steering wheel to the left and right, and remove the steering column shroud lower panel (A).



- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).
[Steering column shroud upper panel]
- Using a screwdriver or remover, remove the crash pad side cover (A). [LH] [RH]

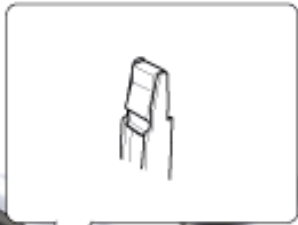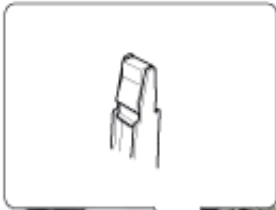

- Loosen the mounting screws and remove the crash pad molding (A). [LH] [RH]

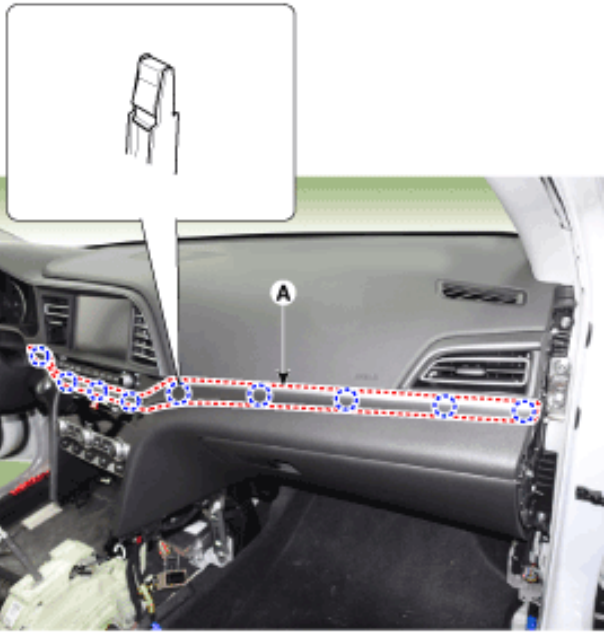

- Using a screwdriver or remover, remove the cluster fascia panel (A).

