

Component Procedures: Scuff Plate


Table of Contents

1. Door Scuff Trim - Components and Components Location (Article 45037)
2. Door Step Trim - Components and Components Location (Article 45039)
3. Door Scuff Trim - Repair Procedures (Article 45038)
4. Door Step Trim - Repair Procedures (Article 45040)

Component Procedures: Scuff Plate

Door Scuff Trim - Components and Components Location (Article 45037)


- Component Location

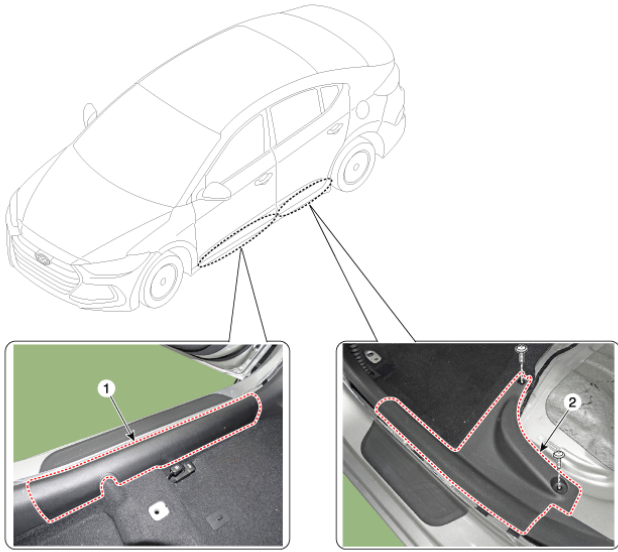

1. Front door scuff trim 2. Rear door scuff trim

Door Step Trim - Components and Components Location (Article 45039)

- Component

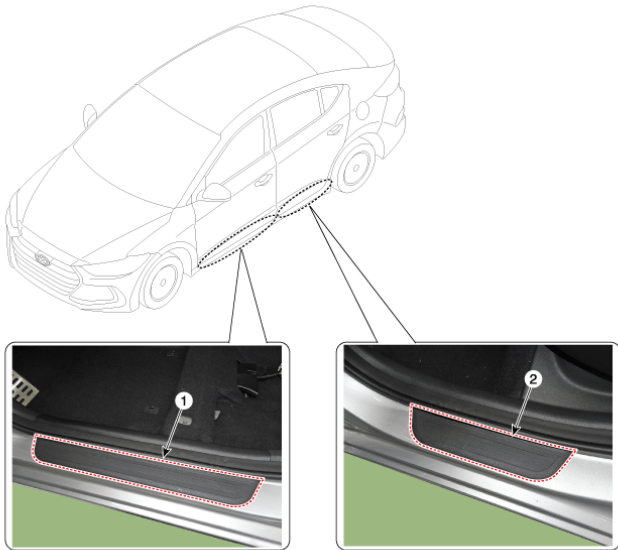

1. Front door step trim 2. Rear door step trim

Door Scuff Trim - Repair Procedures (Article 45038)

- Replacement

[Front door scuff trim]

Put on gloves to prevent hand injuries.

⚠ CAUTION

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.


NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.

- Using a screwdriver or remover, remove the front door scuff trim (A).

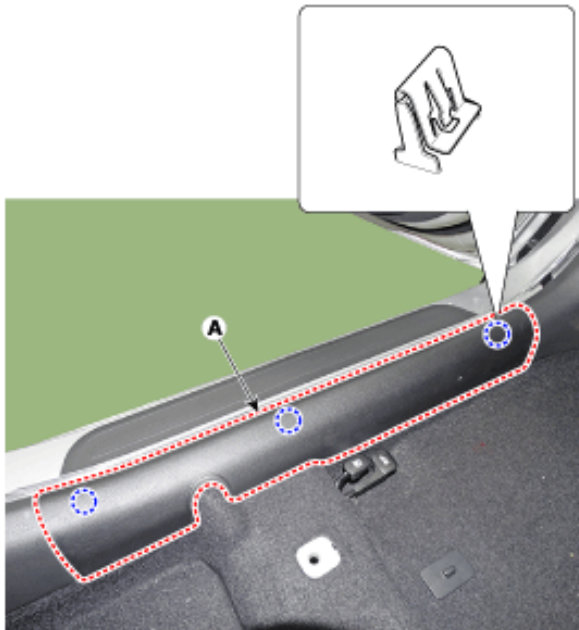


- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

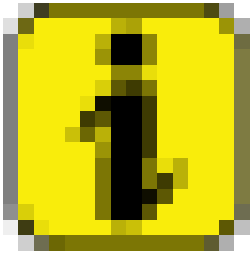

Information

- Replace any damaged clips (or pin-type retainers).
[Rear door scuff trim]
- Remove the rear seat cushion assembly. (Refer to Rear Seat - "Rear Seat Assembly")
- Loosen the mounting screws and remove the rear door scuff trim (A).

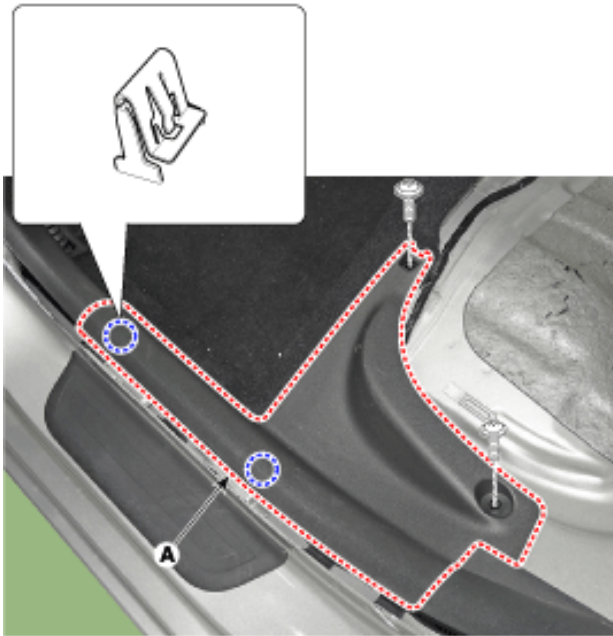

Door Step Trim - Repair Procedures (Article 45040)


- Replacement
[Front door step trim]
- Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.
- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- Using a screwdriver or remover, remove the front door step trim (A).

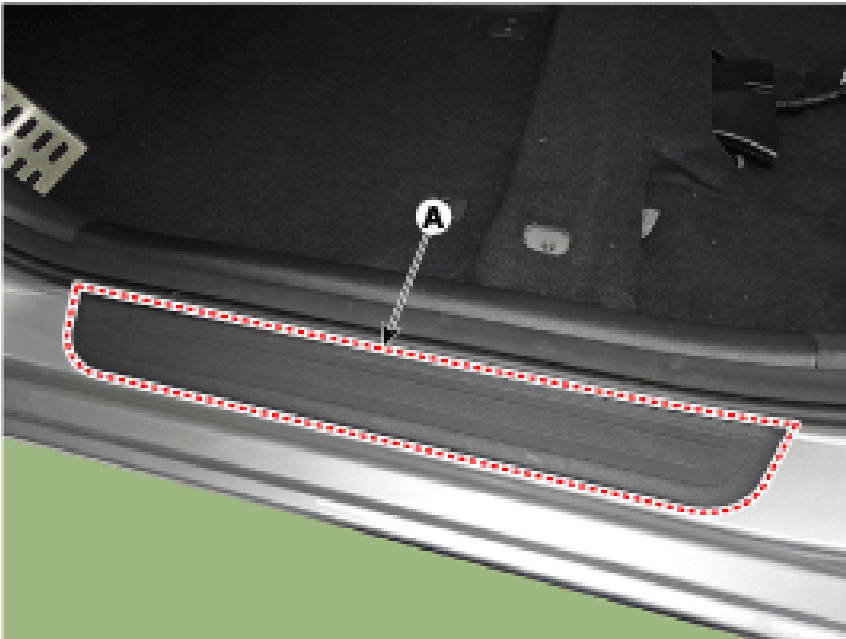

- To install, reverse the removal procedure. Replace any damaged clips (or retainers or fasteners).
Replace any damaged clips (or retainers or fasteners).

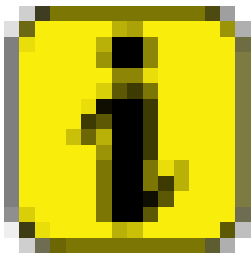

Information

- Replace any damaged clips (or retainers or fasteners).
[Rear door step trim]
- Using a screwdriver or remover, remove the rear door step trim (A).

