

Component Procedures: Transmission Temperature Sensor/Switch

Table of Contents

1. Automatic Transaxle (Article 44440)
2. Automatic Transaxle (Article 44444)
3. Automatic Transaxle (Article 44448)
4. Automatic Transaxle (Article 44442)
5. All Technical Service Bulletins (itype_100)

Component Procedures: Transmission Temperature Sensor/Switch

Automatic Transaxle (Article 44440)

Non Standards

- Transmission Oil Temperature Sensor - Description and Operation (44441)

Automatic Transaxle (Article 44444)

Non Standards

- Transaxle Oil Temperature Sensor - Schematic Diagrams (44445)

Automatic Transaxle (Article 44448)

Non Standards

- Transaxle Oil Temperature Sensor - Repair Procedures (44449)

Automatic Transaxle (Article 44442)

Non Standards

- Transaxle Oil Temperature Sensor - Specifications (44443)

All Technical Service Bulletins (itype_100)

Tsbs

- AUTOMATIC TRANSAXLE OIL TEMPERATURE SENSOR DTC P071100, P071200 & P071300 (20-AT-015H, 2020/04/09)